



1890

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	46	807151A 9	PUMP ASSEMBLY, Sea Water	1		
1	46	807151A14	BODY/IMPELLER KIT	1		
2	25	33465	O-RING	1		
3	10	807356	SCREW, (.312-18 x 2.680)	2		
3	10	74822	SCREW, (.312-18 x 3.500)	3		
4	12	814806	WASHER, (.344 x .688 x .065)	5		
5	47	59362T 1	IMPELLER	1		
6	25	94288	QUAD RING	1		
7		94576	WEAR PLATE, Inner	1		
8	46	94913A 5	HOUSING ASSEMBLY, Pump	1		
9	26	90562	SEAL, (1.254 Outside Diameter)	2		
10	30	72961	BEARING, Ball	2		
11		59501A 1	SHAFT	1		
12	53	23720	RING, Retaining	1		
13	26	72785	SEAL	1		
14		861579	PULLEY	1		
15	13	39107	LOCKWASHER, (.312)	3		
16	11	21908	NUT, (.312-18)	3		
17		807749 1	BRACKET	1		
18	10	34353	SCREW, (.375-16 x 1.00)	2		
19	13	35048	LOCKWASHER, (.375)	2		