



Parts List					
Ref	Class	Part	Description	Qty	Footnote
	50	46640	STARTER MOTOR ASSEMBLY, C	1	
1		46649	HOUSING, STARTER	1	
2	23	37154	BUSHING, STARTER HOUSING	1	
3		46641	STARTER SOLENOID, STARTER	1	
4	10	46665	SCREW KIT, STARTER SOLENOI	4	
5	17	46644	PIN ASSEMBLY, SOLENOID ARM	1	
6		46645	ARM, STARTER SOLENOID	1	
7		46646	INSERT, STARTER SOLENOID AI	1	
8	11	46664	NUT AND TERMINAL KIT, START	1	
9	13	46663	LOCKWASHER, STARTER SOLEI	1	
10	11	46648	NUT, STARTER SOLENOID TERM	1	
11		46650	DRIVE ASSEMBLY, CLUTCH	1	
12	23	46651	BUSHING ASSEMBLY, CLUTCH C	1	
13		46655	GROMMET KIT, STARTER HOUS	1	
14	10	46652	BOLT, THRU- STARTER HOUSIN	2	
15	11	46654	NUT, STARTER HOUSING THRU	2	
16	10	46653	SCREW, STARTER FIELD COIL	4	
17		46656	ARMATURE	1	
18		46657	FIELD COIL ASSEMBLY	1	
19		46661	BRUSH KIT, STARTER (POSITIVE	1	
20	24	46662	SPRING KIT, STARTER BRUSH	1	
21		46658	BAND, STARTER MOTOR	1	
22	11	46659	NUT, STARTER MOTOR BAND S	1	
23	23	37154	BUSHING, END COVER	1	