



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		832811580	HANGER-Engine	1			
2	11	832661090	NUT-Gear	1			
3		831002531	PUMP-Coolant-Circulating (See Pag	1			
4		831003011	PUMP-Raw Water	1			
NS	3	831311510	IMPELLER-Raw Water Pump	1			
NS	3	831191410	GASKET-Impeller Cover	1			
5		831732530	PULLEY-Coolant Pump	1			
6		832681900	PIPE-Coolant By-Pass	1			
7		832812360	PIPE-Air Escape	1			
8		833011162	CASE-Thermostat	1			
9	27	833251280	GASKET-Thermostat	1			
10		833331621	MANIFOLD-Coolant	1			
11	43	833511110	GEAR-Drive	1			
12		833211020	JOINT-Water	1			
13	10	830124303	BOLT-Banjo	1			
14		830146177	THERMOSTAT	1			
15		830236195	HOSE-Crankcase Vent	1			
16		832912187	BOLT-Banjo	2			
17	10	838108200	BOLT-Circulating Pump	5			
18	10	838108850	BOLT-Housing	4			
19	10	838108950	BOLT-Circulating Pump	2			
20	10	839108201	BOLT-Pulley	4			
21	10	839108252	BOLT-Manifold	2			
22		839108851	BOLT-Manifold	1			
23	10	830110250	BOLT-Raw Water Pump	2			
24		831110751	BOLT-Housing	1			
25	10	831110801	BOLT-Housing	2			
26	12	835420150	WASHER-Sealing	2			
27	12	835912111	WASHER-Sealing	4			
28		836926107	CLAMP	1			
29		835131112	O-RING	2			
30		835160104	O-RING	1			
31		835526117	JOINT	1			