



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	55304A 1	STARTER MOTOR ASSEMBLY, C	1		
1	11	35053	NUT, PINION STOP COLLAR	1		
2		32406	MOTOR DRIVE	1		
3	24	32407	SPRING, TENSION - MOTOR DR	1		
4	392	3693	PLATE ASSEMBLY, DRIVE END	1		
5	392	2518	BUSHING, DRIVE END PLATE	1		
6	392	3906	ARMATURE	1		
7	392	2523	PACKAGE, ARMATURE THRU	1		
8	392	3407	FRAME AND FIELD ASSEMBLY	1		
9	392	2521	BRUSH AND TERMINAL SET	1		
10	392	2514	SPRING SET, BRUSH (2 SPRIN	2		
11	392	2519	BRUSH PLATE AND HOLDER A	1		
12	392	3692	END CAP ASSEMBLY, COMMUT	1		
--	392	2516	BUSHING, COMMUTATOR EN	1		
13	16	35099	STUD, STARTER MOTOR MOUN	2		
14	392	3694	BOLT, THRU - END CAP TO EN	3		
15	13	26993	LOCKWASHER, THRU BOLT	3		
16	11	35814	NUT, THRU BOLT	3		