



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	30	20066	BALL BEARING, DISTRIBUTOR H	1			
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1			
3	23	53539	SLEEVE, ROTOR SHAFT	1			
4	393	3736A 3	HOUSING ASSEMBLY, DISTRIBU	1			
5		53417	GROUND STRAP ASSEMBLY, DI	1			
6	10	30663	SCREW, GROUND STRAP ATTAC	1			
7	22	55262	ELBOW, VENT - DISTRIBUTOR H	1			
8	30	26379	BALL BEARING, DISTRIBUTOR	1			
9	23	53538	SPACER, ROTOR SHAFT	1			
10	53	26406	RING, RETAINING - HALL BEAR	1			
11	393	3893	DISC, ROTOR	1			
12	393	3738	ROTOR, DISTRIBUTOR	1			
13	54	55651	CLAMP, DISTRIBUTOR CAP TO C	1			
14	10	55943	SCREW, DISTRIBUTOR CAP CLA	1			
15	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1			
16	32	34395A 1	HOSE, VENT - DISTRIBUTOR TO	1			
16	32	34395A 1	HOSE, VENT - DISTRIBUTOR TO	1			
17	22	31521	ELBOW, VENT HOSE TO BOTTO	2			
18	393	3836A 1	HIGH TENSION CABLE ASSEMBL	1			
19	25	26547	GROMMET, HIGH TENSION CA	1			
20	332	2854	BOOT, HIGH TENSION CABLE	1			
21	393	1275	SLEEVE, HIGH TENSION CABLE	1			
22	393	3751A 2	DISTRIBUTOR CAP ASSEMBLY	1	A-27-55896 GASKET, DISTRIBU		
--	393	1293A 1	BRUSH AND SPRING ASSEMBL	1			
23	22	31521	ELBOW, VENT - DISTRIBUTOR	1			
24	33	45191	SPARK PLUG (CHAMPION - L19V	6			
25		47899A 9	SPARK PLUG LEAD ASSEMBLY #	6			
--		20121	CONNECTOR, SPARK PLUG LE	6			
26		47604A 1	PROTECTOR, SPARK PLUG LEA	6			
27	393	1275	SLEEVE, SPARK PLUG LEAD TO	6			
28	25	26547	GROMMET, SPARK PLUG LEADS	12			
29		45409	WIRE RETAINER, HIGH TENSIO	2			
30		45392	BRACKET, FRONT - WIRE RETAI	1			
31		47398	BRACKET, REAR - WIRE RETAIN	1			
32	10	30663	SCREW, FRONT AND REAR BRA	4			
33		45391	SPACER, RUBBER - HIGH TENSII	2			
34	332	2983A 5	IGNITION COIL ASSEMBLY, COMI	1			
35	10	22486	SCREW, COIL MOUNTING BRAC	1			
36	13	26992	LOCKWASHER, COIL MOUNTING	1			
37	10	37561	SCREW, COIL MOUNTING BRAC	2			
38	11	46987	NUT, COIL MOUNTING BRACKET	2			