



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		57580A	RECTIFIER ASSEMBLY	1		
2	10	24963	SCREW, RECTIFIER TO BOTTOM	1		
3	13	22773	LOCKWASHER, RECTIFIER SCRE	1		
4	13	26996	LOCKWASHER, RECTIFIER TERM	2		
5	11	45076	NUT, RECTIFIER TERMINAL (10-	2		
6		54293A	CHOKE SOLENOID ASSEMBLY	1		
7	10	26065	SCREW, CHOKE SOLENOID TO F	2		
8	11	46793	NUT, CHOKE SOLENOID SCREW	2		
9	13	26996	LOCKWASHER, CHOKE SOLENO	1		
10	11	45076	NUT, CHOKE SOLENOID TERMIN	1		
11		56074A	PLUNGER ASSEMBLY, CHOKE SI	1		
12	19	35827	PLUG, BOTTOM COWL	1		
13	53	30428	FASTENER, PLUG TO BOTTOM C	1		
14		34228	SUPPORT, EXTERNAL WIRING F	1		
--		52907	INSULATOR, SUPPORT TO BOTI	1		
15	10	31163	SCREW, SUPPORT TO BOTTOM	1		
16	11	46887	NUT, SUPPORT FASTENING SCF	1		
17	10	20776	SCREW, WIRING HARNESS GRC	1		
18	13	24996	LOCKWASHER, WIRING HARNE	1		
19		56370	WIRING HARNESS (INTERNAL)	1		
20	54	52876	CLAMP, WIRING HARNESS ATTA	1		
21	10	20189	SCREW, WIRING HARNESS CLAI	2		
22	24	28975	SPRING, GARTER - INTERNAL W	1		
23		47764	STA-STRAP, WIRING HARNESS	1		
24	54	26550	CLAMP, WIRING HARNESS (5/16	1		
24	54	22740	CLAMP, WIRING HARNESS (3/8"	2		
25	10	30663	SCREW, WIRING HARNESS CLAI	3		
26		22789	"D" WASHER, WIRING HARNESS	3		
27	50	55601	STARTER MOTOR ASSEMBLY	1		
28	10	35213	SCREW, STARTER MOTOR TO C	2		
29	13	26992	LOCKWASHER, CABLE TO STAR	1		
30	11	20890	NUT, CABLE TO STARTER MOT	1		
31		56466	CABLE, STARTER MOTOR TO ST	1		
32	10	29197	SCREW, GROUND WIRE TO STA	1		
33	13	26992	LOCKWASHER, GROUND WIRE I	1		
34		25661	SOLENOID, STARTER	1		
35	10	21625	SCREW, STARTER SOLENOID TI	2		
36	13	26992	WASHER, STARTER SOLENOID	2		
37	13	26996	LOCKWASHER, STARTER SOLEI	2		
38	11	20645	NUT, STARTER SOLENOID TERM	2		
39		28928	ROOT RUBBER, STARTER SOLE	2		