



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32970	RECTIFIER ASSEMBLY	...1		
2	13	26993	LOCKWASHER, RECTIFIER MO	...1		
3	11	21929	NUT, RECTIFIER MOUNTING S	...1		
4	32	28373	SLEEVE, RECTIFIER LEADS	...3		
5	10	29852	SCREW, HARNESS AND STATOF	...3		
6	11	29488	NUT, HARNESS AND STATOR LE	...3		
7		25571A 2	RECTIFIER ASSEMBLY	,1,1,		
8	32	26528	SLEEVE, RECTIFIER (RED LEA	,1,1,		
9		22647	DISCONNECT, KNIFE - RECTIFI	,3,3,		
10	13	26993	BLOCKWASHER, RECTIFIER M	,1,1,		
11		21929	NUT, RECTIFIER MOUNTING S	,1,1,		
12		28597	BRACKET, RECTIFIER MOUNTIN	,1,1,1		
13	10	21091	SCREW, RECTIFIER BRACKET TI	,2,2,2		
14	11	24652	NUT, BRACKET MOUNTING SCR	,2,2,2		
15	50	32411	STARTER MOTOR (DELCO-REM)	1,1,1,		
16	50	30829	STARTER MOTOR (DELCO-REM)	1,1,1,		
17	10	22698	SCREW, STARTER MOTOR TO C	,2,2,2,2		
18	13	26993	LOCKWASHER, STARTER MOTO	,2,2,2,2		
19		25596	WIRE, STARTER MOTOR TO STA	,1,1,1,1		
20	10	29197	SCREW, GROUND WIRE TO STA	,1,1,1,1		
21	13	26992	LOCKWASHER, GROUND WIRE I	,1,1,1,1		
22		28016A 1	GROUND STRAP ASSEMBLY	,1,1,1,1		
23		28062	STARTER SOLENOID	,1,1,1,		
24		32445	STARTER SOLENOID	...1		
25	13	26996	LOCKWASHER, SOLENOID TERM	,2,2,2,2		
26	11	20645	NUT, SOLENOID TERMINAL (#10	,2,2,2,2		
27	13	26993	LOCKWASHER, SOLENOID (5/16	,2,2,2,2		
28	11	20083	NUT, SOLENOID TERMINAL - INS	,1,1,1,1		
29	11	26062	NUT, CAP - SOLENOID TERMINA	,1,1,1,1		
30	10	29238	SCREW, STARTER SOLENOID TI	,2,2,2,2		
31	54	24836	CLAMP, HARNESS LEAD WIRE (1	,1,1,1,1		
32	54	22740	CLAMP, HARNESS LEAD WIRE (2	,1,1,1,		
33	54	25231	CLAMP, HARNESS LEAD LEAD W	...1		
34		22789	"D" WASHER, CLAMP FASTENIN	,2,2,2		
35	10	30009	SCREW, HARNESS LEAD WIRE F	,2,2,2		
36		28370	WIRING HARNESS (INTERNAL)	,1,1,1,		
37		33401	WIRING HARNESS (INTERNAL)	...1		
38		26079	PLATE, BACKING - WIRING HAR	,1,1,1,1		
39	10	26128	SCREW, BACKING PLATE TO BO	4,4,4,4		
40	24	28375	SPRING, GARTER - INTERNAL W	,1,1,1,1		
41	54	22789	"S" CLIP, WIRING HARNESS LEA	,2,2,2,2		