



10705

## 2003TB

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	858129	1	Heat exchanger		
2	858130	1	· Housing		
3	948981	1	· O-ring		
4	858134	1	· Insert		
5	858133	2	· Rubber gasket		
6	842597	1	· Gasket		
7	858131	1	· Cover		
8	858132	1	· Flange		
9	941907	4	· Spring washer		
10	955297	4	· Screw		
11	940132	2	Screw		
12	941907	4	Spring washer		
13	955297	2	Screw		
14	955269	1	Screw		
15	840740	1	Clamp		
16	860531	1	Coolant pipe		THERMOSTAT HOUSING-HEAT EXCHANGER
17	418411	1	Sealing ring		
18	418411	1	Sealing ring		
19	860532	1	Coolant pipe		EXPANSION TANK-HEAT EXCHANGER-TURBO-CIRCULATION PUMP.
20	418411	1	Sealing ring		
21	840950	1	Tube		HEAT EXCHANGER-EXHAUST BEND
22	418445	1	Sealing ring		
23	840949	1	Tube		OIL COOLER-HEAT EXCHANGER
				02B-0800	
24	955269	1	Screw		
25	82744	1	Tap		
26	860533	1	Coolant pipe		EXPANSION TANK-HEAT EXCHANGER-TURBO-CIRCULATION PUMP.
27	952969	X	Rubber hose		L = 95 MM
28	961665	2	Hose clamp		
29	952629	2	Clamp		
30	948356	1	Screw		
31	945407	1	Flange nut		
32	807250	1	Spacer sleeve		