



5780

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	843569	1	Injection pump		
2	240910	1	• Governor	02C-0550	
3	243083	1	• Feed pump	02C-0650	
4		1	• PUMP HOUSING		
5	239982	6	• Tappet		
6	240779	6	• • Bolt		
7	240780	6	• • Bushing		
8	240781	6	• • Roller		
9	238379	6	• • Plate		
10	239986	6	• Spring disc		
11	244065	6	• Spring		(239985)
12	239984	6	• Spring disc		
13	240782	6	• Control sleeve		
14	239991	6	• Cover		
15	241677	6	• Washer		
16	239990	6	• Lock ring		
17	240003	6	• Spacer ring		
18	240002	6	• O-ring		
19	240424	X	• Gasket		TH = 0,15 MM
	240004	X	• Gasket		TH = 0,40 MM
	240005	X	• Gasket		TH = 0,50 MM
	240006	X	• Gasket		TH = 0,60 MM
	240007	X	• Gasket		TH = 0,70 MM
	240008	X	• Gasket		TH = 0,80 MM
20	243741	6	• Bushing		
21	239989	6	• O-ring		
22	240422	6	• O-ring		
23	240808	6	• Pump element		
24	240423	6	• Delivery valve		
25	239993	6	• Gasket		
26	240969	6	• Spring		
27	870911	1	• Plug	02C-0550	
28	240001	6	• Gasket		
29	243742	6	• Delivery valve retai		
30	243743	12	• Washer		
31	240010	12	• Screw		
32	941908	12	• Spring washer		
33	955783	12	• Nut		
34	240011	1	• Cover		
35	956209	2	• Screw		
36	18891	2	• Lock washer		
37	240907	1	• Control rod		
38	240014	2	• Guide sleeve		
39	244008	1	• Lock pin		(131015)
40	240015	1	• Bushing		
41	240121	2	• Plug		
43	240971	6	• Plug		
44	240972	X	• Washer		TH = 0,2 MM
	240973	X	• Washer		TH = 0,5 MM
45	240429	6	• Plug		
46	243263	1	• Plug		
47	240017	1	• Gasket		
48	240789	1	• Camshaft		
49	240426	1	• Bearing		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
50	240427	2	· Screw		
51	941906	2	· Spring washer		
52	240023	1	· Roller bearing		
53	240022	1	· Sealing ring		
54	243299	1	· O-ring		
55	240024	X	· Adjusting washer		TH = 0,10 MM
	240025	X	· Adjusting washer		TH = 0,12 MM
	240026	X	· Adjusting washer		TH = 0,14 MM
	240027	X	· Adjusting washer		TH = 0,16 MM
	240028	X	· Adjusting washer		TH = 0,18 MM
	240029	X	· Adjusting washer		TH = 0,30 MM
	240030	X	· Adjusting washer		TH = 0,50 MM
56	240021	1	· Cover		
57	956094	4	· Screw		
58	941906	4	· Spring washer		
59	955806	1	· Nut		
60	941913	1	· Spring washer		
61	35168	1	· Key		
62	240023	1	· Roller bearing		
63	240032	1	· Ring		
64	240033	X	· Adjusting washer		TH = 1,2 MM
	240034	X	· Adjusting washer		TH = 1,5 MM
	240035	X	· Adjusting washer		TH = 1,8 MM
	240036	X	· Adjusting washer		TH = 2,0 MM
65	240947	1	· Cover		
66	240948	1	· Gasket		
67	956205	12	· Screw		
68	239896	1	· Gasket		
69	130673	3	· Stud		
70	955781	3	· Nut		
71	941906	3	· Spring washer		
72	241647	1	· Setting indicator		
73	100101	2	· Screw		
74	941906	2	· Spring washer		