



8353

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	838665	1	Injector	
	3803231	1	Injector, exch	Exchange unit
2		1	• NOZZLE HOLDER	
3	243467	X	• • Adjusting washer	TH = 1,00 MM
	243468	X	• • Adjusting washer	TH = 1,05 MM
	6885721	X	• • Adjusting washer	TH = 1,08 MM
	243469	X	• • Adjusting washer	TH = 1,10 MM
	243470	X	• • Adjusting washer	TH = 1,15 MM
	243471	X	• • Adjusting washer	TH = 1,20 MM
	243472	X	• • Adjusting washer	TH = 1,25 MM
	6885724	X	• • Adjusting washer	TH = 1,28 MM
	243473	X	• • Adjusting washer	TH = 1,30 MM
	243474	X	• • Adjusting washer	TH = 1,35 MM
	243475	X	• • Adjusting washer	TH = 1,40 MM
	243476	X	• • Adjusting washer	TH = 1,45 MM
	6885727	X	• • Adjusting washer	TH = 1,48 MM
	243477	X	• • Adjusting washer	TH = 1,50 MM
	243478	X	• • Adjusting washer	TH = 1,55 MM
	243479	X	• • Adjusting washer	TH = 1,60 MM
	243480	X	• • Adjusting washer	TH = 1,65 MM
	6885730	X	• • Adjusting washer	TH = 1,68 MM
	243481	X	• • Adjusting washer	TH = 1,70 MM
	243482	X	• • Adjusting washer	TH = 1,75 MM
	243483	X	• • Adjusting washer	TH = 1,80 MM
	6885739	X	• • Adjusting washer	TH = 1,84 MM
	6885740	X	• • Adjusting washer	TH = 1,88 MM
	243485	X	• • Adjusting washer	TH = 1,90 MM
	243486	X	• • Adjusting washer	TH = 1,95 MM
4	6885720	1	• • Compression spring	
5	244906	1	• • Pressure bolt	
6	6885743	1	• • Washer	
7	244907	2	• • Locating pin	
8	243489	1	• • Nut	
9	858358	1	• Nozzle	