



6189

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	466387	1	Oil pump		
				02A-0400	
2	421404	1	Baffle		
3	955538	4	Screw		
4	421051	1	Oil pipe		
5	414621	1	Strainer		
6	118125	1	Lock ring		
7	896693	1	Tube		
8	949657	2	O-ring	IK	
9	940135	2	Screw		
10	941907	2	Spring washer		
11	955530	2	Screw		
12	941907	2	Spring washer		
13	421049	1	Oil pipe		
14	949656	1	O-ring	IK	
15	955530	2	Screw		
16	941907	2	Spring washer		
17	466906	1	Fitting		
18	896773	1	Bracket		
19	955523	2	Screw		EARLY TYPE
19A	942402	4	Flange screw		LATE TYPE
20	941907	2	Spring washer		EARLY TYPE
21	955894	2	Washer		EARLY TYPE
22	953236	2	Stud		(953235)
23	955826	2	Nut		EARLY TYPE
24	941907	2	Spring washer		EARLY TYPE
25	955894	2	Washer		EARLY TYPE
26	843748	1	Oil pan		
27	424919	1	Gasket	IK	(421025)
28	800877	1	Inspection lid		WHEN OIL SUPERVISION IS NOT INSTALLED.
29	843838	1	Hatch		
30	862597	2	Gasket	IK	(823185)
31	956569	24	Screw		
32	11992	24	Gasket	IK	
33	956570	36	Screw		
34	941907	36	Spring washer		
35	968216	1	Plug		(951906)
36	844593	1	Bracket		
37	862711	1	Gasket		(842928)
38	940135	3	Screw		
39	941907	3	Spring washer		
40	823016	1	Oil dipstick		
41	955982	1	O-ring		
42	843844	1	Tube		
43	957185	1	Gasket		
44	421123	1	Reducing valve		
45	949721	1	O-ring	IK	
46	940100	2	Screw		
47	941906	2	Spring washer		
48		1	OIL FILTER AND INSTALLATION COMPONENTS	02A-0450	
49		1	OIL AND FUEL SUPERVISION WITH INSTALLATION COMPONENTS		SEE GROUP 3

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
58		1	OIL BILGE PUMP WITH INSTALLATION COMPONENTS	02A-0500	
59	947061	2	Gasket	IK	