



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	844442	1	Injection pump		REPL BY 846836
				02C-0150	
	846836	1	Injection pump, FUEL INJECTION PUMP		MO 154104/XXXX-
				02C-0175	
2	471038	1	Bracket		
3	417588	1	Guide sleeve		
4	423161	2	Guide sleeve		
5	955564	2	Screw		
	955564	1	Screw		WHEN OIL SUPERVIOSION IS INSTALLED.
	955568	1	Screw		WHEN OIL SUPERVIOSION IS INSTALLED.
6	955566	2	Screw		
7	940280	4	Spring washer		
8	940156	4	Screw		
9	190509	4	Washer		
10		1	FUEL INJECTION PUMP	02C-0100	
11	243405	1	Fuel filter		
				02C-0350	
12	837399	1	Bracket		
13	940134	2	Screw		
14	941909	2	Spring washer		
15	942338	2	Screw		
16	942336	2	Spring washer		
17	960630	2	Plug		
18	957178	2	Gasket		
19	843671	1	Delivery pipe		CYL. NO. 1
20	843672	1	Delivery pipe		CYL. NO. 2
21	843673	1	Delivery pipe		CYL. NO. 3
22	843674	1	Delivery pipe		CYL. NO. 4
23	843675	1	Delivery pipe		CYL. NO. 5
24	843676	1	Delivery pipe		CYL. NO. 6
25	845073	2	Clamp		FOR 3 PIPES
	845072	3	Clamp		FOR 2 PIPES.
26		1	BRACKET		SEE GROUP 2B
27	947191	1	Clamp		
28	466896	1	Leak-off pipe		
29	74034	1	Hollow screw		
30	946729	3	Gasket		
31	74033	6	Hollow screw		INCLUDED IN FUEL INJECTOR.
32	947620	12	Gasket		(233321)
33	845442	1	Leak-off pipe		
34	844285	6	Injector		
				02C-0300	
35	469797	6	Yoke		(466399)
36	466400	6	Stud		
37	971086	6	Nut		(961992)
38	466401	6	Pin		
39	35096	1	Overflow valve		
40	957178	9	Gasket	IK	
41	845667	1	Tube		
42	16496	1	Hollow screw		
43	845844	1	Tube		
44	25167	1	Hollow screw		
45	941492	1	Clamp		
46	821625	1	Anchorage		
47	950046	1	Screw		
48	941906	1	Spring washer		
49	955825	1	Nut		
50	845450	2	Fuel hose		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
51	956969	4	Ferrule		
52	956983	4	Nut		
53	836837	1	Tube		
	837729	1	Tube		WHEN MANUAL SPEED CONTROL IS INSTALLED.
54	25167	1	Hollow screw		
55	942007	1	Hollow screw		(954394)
56	957178	3	Gasket		
57	957181	1	Gasket		
58	477173	1	Pressure equalizer		(466398)
59	957178	1	Gasket		
60	837474	1	Tube		
61	837475	1	Tube		
62	26013	2	Hollow screw		
63	947624	4	Gasket		
64	25167	1	Hollow screw		
65	944679	1	Hollow screw		
66	240664	1	Screw		
67	25534	1	Gasket		
68	836836	1	Tube		
69	48634	1	Hollow screw		
	943103	1	Hollow screw		WHEN OIL SUPERVSION IS INSTALLED.
70	957173	2	Gasket		
71	845689	1	Tube		SEE GROUP 3. WHEN OIL SUPERVSION IS INSTALLED.
72	957173	1	Gasket		WHEN OIL SUPERVSION IS INSTALLED.
73	954356	1	Cap nut		
74	954364	1	Fitting		
75	191936	1	T-pipe		
76	846457	1	Reservoir		
77	846460	1	Sealing ring		
78	846458	2	Sealing ring		
79	846459	1	Cover		
80	846461	2	Wing screw		
81	947620	2	Gasket		
82	951665	2	Retaining ring		
83	960630	1	Plug		
84	969011	1	Gasket		(947621)
85	25168	1	Banjo nipple		
86	957178	2	Gasket		
87	25167	1	Hollow screw		
88	846243	1	Delivery pipe		CYL.NO.1. JACKETED FUEL PIPES
89	846244	1	Delivery pipe		CYL.NO.2. JACKETED FUEL PIPES
90	846245	1	Delivery pipe		CYL.NO.3. JACKETED FUEL PIPES
91	846246	1	Delivery pipe		CYL.NO.4. JACKETED FUEL PIPES
92	846247	1	Delivery pipe		CYL.NO.5. JACKETED FUEL PIPES
93	846248	1	Delivery pipe		CYL.NO.6. JACKETED FUEL PIPES
94	955279	2	Screw		
95	941906	2	Spring washer		
96	955781	2	Nut		
97	846249	2	Leak-off line		
98	846183	6	Hollow screw		
99	845953	6	Gasket		
100	845673	1	Oil pipe		
101	845672	1	Tube		
102	845674	1	Oil pipe		SEE GROUP 3
	846617	1	Oil pipe		ENGINE WITH OIL SUPERVISION IN REAR OIL PAN COVER.
103	956969	5	Ferrule		
104	956983	5	Nut		
105	18387	1	Clamp		
	946834	1	Clamp		ENGINE WITH OIL SUPERVISION IN REAR OIL PAN COVER.
106	404279	2	Clamp		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
107	956095	1	Screw		
108	941906	1	Spring washer		
109	955781	1	Nut		
110	957123	1	T-nipple		
111	959223	1	Screw		L = 30 MM
	959227	1	Screw		L = 50 MM
112	941907	2	Spring washer		