



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	240343	1			INCLUDED IN FUEL INJECTOR.
	241510	1		02C-0450	FOR GENERATING UNIT.
	836907	1	Injection pump	02C-0550	REPL BY 843569
	843569	1	Injection pump	02C-0550	
2		2	FUEL HOSE		STD REPL BY 837363
		2	FUEL HOSE		SPEC VER REPL BY 837364
2A	845372	2	Fuel hose		(837363)
	845372	2	Fuel hose		(837363)
3	11998	2	Gasket	IK	
4	22753	2	Nipple		
5	26016	2	Nipple		
6	25167	1	Hollow screw		
7	16496	1	Hollow screw		
8	18671	4	Gasket	IK	
9	823528	1	Tube		
10	74033	1	Hollow screw		
11	957171	3	Gasket	IK	
12	424202	1	Leak-off pipe		
13	74034	1	Hollow screw		
14	74033	5	Hollow screw		
15	957171	12	Gasket	IK	
16	240346	6	Injector	02C-0900	
17	941928	12	Stud		
18	417110	12	Nut		
19	35096	1	Overflow valve		
20	18671	1	Gasket	IK	
21	241672	1	Filter housing		REPLACED BY 77989.
	471172	1	Filter housing	02C-1050	
				02C-1075	
22	940162	2	Screw		
23	942336	2	Spring washer		
24	823526	1	Tube		
25	823527	1	Tube		
26	25167	4	Hollow screw		
27	18671	8	Gasket	IK	
28	896730	1	Tube		CYL. NO. 1
29	896731	1	Tube		CYL. NO. 2
30	896732	1	Tube		CYL. NO. 3
31	896733	1	Tube		CYL. NO. 4
32	896734	1	Tube		CYL. NO. 5

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
33	896735	1	Tube		CYL. NO. 6
34	960630	2	Plug		
35	957178	2	Gasket	IK	
36	466398	1	Pressure equalizer		
37	957178	1	Gasket		
38			FUEL INJECTION PUMP	02C-0300	
39	414348	2	Clamp		
40	414349	2	Rubber spacer		
41	414346	2	Clamp		
42	414347	2	Rubber spacer		
43	414344	4	Clamp		
44	414345	4	Rubber spacer		
45	955247	6	Screw		
46	955248	2	Screw		
47	955780	4	Nut		
48	414736	1	Nut plate		
49	422245	1	Pressure oil line		
50	48634	1	Hollow screw		
51	942081	1	Hollow screw		EARLY TYPE SEE GROUP 2B
	837709	1	Hollow screw		LATE TYPE SEE GROUP 2B
52	957173	2	Gasket		
53	18666	1	Gasket	IK	
54	11994	1	Gasket		
55	422246	1	Pipe		
56	25167	1	Hollow screw		
57	954394	1	Hollow screw		
58	18671	3	Gasket	IK	
59	11998	1	Gasket	IK	
60	468558	1	Bracket		
61	423161	2	Guide sleeve		
62	417588	1	Guide sleeve		
63	955566	4	Screw		
64	940280	4	Spring washer		
65	940156	4	Screw		
66	190509	4	Washer		
67	824377	1	Protecting plate		MOXXXXX/1496-.
68	824379	6	Protecting plate		MOXXXXX/1496-.
69	836456	6	Rubber guard		MOXXXXX/1496-.
70	243405	1	Fuel filter		MOXXXXX/1496-.
				02C-1100	
71	845319	1	Bracket		(836365). MOXXXXX/1496-.
72	940134	2	Screw		MOXXXXX/1496-.
73	941909	2	Spring washer		MOXXXXX/1496-.
74	940115	2	Screw		MOXXXXX/1496-.
75	942336	2	Spring washer		MOXXXXX/1496-.
76	35096	2	Overflow valve		MOXXXXX/1496-.
77	837106	1	Tube		MOXXXXX/1496-.
78	837107	1	Tube		MOXXXXX/1496-.
79	26013	2	Hollow screw		MOXXXXX/1496-.
80	11998	4	Gasket	IK	MOXXXXX/1496-.
81	836748	1	Tube		MOXXXXX/1496-.
82	180211	1	Hollow screw		MOXXXXX/1496-.
83	844720	1	Tube		(837108). MOXXXXX/1496-.
84	18671	11	Gasket	IK	MOXXXXX/1496-.
85	957171	5	Gasket	IK	MOXXXXX/1496-.
86	26016	1	Nipple		MOXXXXX/1496-.
87	844721	1	Fuel pipe		(837108). MOXXXXX/1496-.
88	837607	1	Fuel pipe		MOXXXXX/1496-.
89	821625	1	Anchorage		MOXXXXX/1496-.
90	941492	2	Clamp		MOXXXXX/1496-.
91	821076	1	Clamp		MOXXXXX/1496-.
92	950046	2	Screw		MOXXXXX/1496-.
93	941906	2	Spring washer		MOXXXXX/1496-.

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
94	955825	2	Nut		MOXXXXX/1496-.
95	837608	1	Fuel pipe		MOXXXXX/1496-.
96	837609	1	Fuel pipe		MOXXXXX/1496-.
97	941492	1	Clamp		MOXXXXX/1496-.
98	955550	1	Screw		MOXXXXX/1496-.
99	955896	1	Washer		MOXXXXX/1496-.
100	940157	1	Nut		MOXXXXX/1496-.
101	952625	1	Clamp		MOXXXXX/1496-.
102	837534	2			REPL BY 845450. MOXXXXX/1496-.
103	956983	4	• Nut		MOXXXXX/1496-.
104	956969	4	• Ferrule		MOXXXXX/1496-.