



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	ALTERNATOR AND INSTALLATION COMPONENTS		
				030-0700	
2	833669	1	Starter motor		MD11D/HD-HEAT EX.
	3803073	1	Starter motor, exch		Exchange unit
				030-1100	
	838060	1	Starter motor		MO 41791-
	3803077	1	Starter motor, exch		Exchange unit
				030-1100	
3	833335	1	Bracket		
4	946928	1	Stud		SEE GROUP 2A
5	946075	1	Washer		
6	963107	1	Nut		
7	955344	2	Screw		
8	940280	2	Spring washer		
9	955784	2	Nut		
10	941907	1	Spring washer		
11	955782	1	Nut		
12	829587	1	Switch		
13	955945	1	Washer		
14	190663	1	Screw		
15	840074	1	Temperature sensor		
	827151	1	Temperature sensor		MD11C/HD-HE SPEC 867577. MD11D/HD-HE SPEC 867677, -678.
16	18840	1	Gasket	IK	
17	1502028	1	Tachometer sensor		
18	957181	1	Gasket	IK	
19	840529	1	Instrument panel		MO 55700-
				030-1260	
20	829926	1	Cable trunk		MO 52481-. FOR ENGINE WITH ALTERNATOR AND STARTER MOTOR. SPEC 867421, -498, -499, -540.
21	833618	X	Extension cable'verl		L = 2000 MM
	833619	X	Extension cable'verl		L = 5000 MM
22		X	CABLES AND TERMINALS	030-1350	
23	827940	1	Alarm kit		SEE GROUP 9
24	840013	1	Instrument panel		
25	839128	1	· Plug		
26	944540	4	· Screw		
27	834397	1	Voltmeter		
28	834374	1	· Voltmeter		
29	19923	1	· Bulb		
30	808175	1	· Bulb socket		
31	941950	1	Clamp		
32	948210	X	Strip clamp		(827353)
33	824823	1	Fuse box		
34	870980	1	Switch		
35	243700	1	· Handle		
36	955783	2	· Nut		
37	821042	1	Sign		
38	834400	1	Tank gauge		
					SEE GROUP 9