



6660

| REF | PART NO. | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|----------|-----|--------------------|----------|------------------|
| 1 | 852002 | 1 | Reversing gear | | RATIO 1,93:1 |
| 2 | 851673 | 1 | • Gear housing | | |
| 3 | 832668 | 1 | • Cover | | |
| 4 | 956585 | 3 | • Screw | | |
| 5 | 832669 | 1 | • Gasket | IK | |
| 6 | 814643 | 1 | • Hollow screw | | |
| 7 | 955989 | 1 | • O-ring | IK | |
| 8 | 943866 | X | • Adjusting washer | | TH = 0,1 MM |
| | 943867 | X | • Adjusting washer | | TH = 0,2 MM |
| | 943868 | X | • Adjusting washer | | TH = 0,4 MM |
| 9 | 183729 | 2 | • Bearing | | |
| 10 | 839027 | 1 | • Drive gear set | | |
| 11 | 897312 | 2 | • Lock ring | | |
| 12 | 850422 | 1 | • Spacer ring | | |
| 13 | 852433 | 1 | • Wear washer | | (850243) |
| 14 | 181359 | 4 | • Needle bearing | | |
| 15 | 897308 | 2 | • Spacer ring | | |
| 16 | 897385 | 1 | • Shaft | | |
| 17 | 951077 | 1 | • Lock ring | | |
| 18 | 26411 | 1 | • Spacer | | |
| 19 | 813970 | 1 | • Spring | | |
| 20 | 852548 | 1 | • Sliding sleeve | | |
| 21 | 850433 | 1 | • Lock ring | | |
| 22 | 949071 | X | • Adjusting washer | | TH = 0,1 MM |
| | 949072 | X | • Adjusting washer | | TH = 0,15 MM |
| | 949073 | X | • Adjusting washer | | TH = 0,50 MM |
| | 949074 | X | • Adjusting washer | | TH = 0,50 MM |
| 23 | 832644 | 1 | • Bearing sleeve | | |
| 24 | 946179 | X | • Adjusting washer | | TH = 0,1 MM |
| | 943870 | X | • Adjusting washer | | TH = 0,2 MM |
| 25 | | 1 | • NUT | | |
| | 839332 | | • Nut | | ALT TH = 2,10 MM |
| | 839333 | | • Nut | | ALT TH = 2,37 MM |
| | 839334 | | • Nut | | ALT TH = 2,65 MM |
| 26 | 181301 | 1 | • Cone | | |
| 26A | 181302 | 1 | • Cup | | |
| 27 | 851715 | 1 | • Drive gear set | | |
| 28 | 181303 | 1 | • Roller bearing | | |
| 29 | 181304 | 1 | • Cup | | |
| 30 | 941835 | X | • Adjusting washer | | TH = 0,05 MM |
| | 87655 | X | • Adjusting washer | | TH = 0,1 MM |
| | 191840 | X | • Adjusting washer | | TH = 0,15 MM |
| | 87654 | X | • Spacer | | TH = 0,35 MM |
| 31 | 851697 | 1 | • Bearing cover | | |
| 32 | 946329 | 4 | • Flange screw | | |
| 33 | 957173 | 1 | • Gasket | IK | |
| 34 | 960628 | 1 | • Plug | | |
| 35 | 875425 | 1 | • Bearing box | | |
| 36 | 951940 | 1 | • • Tensioning din | | |
| 37 | 183247 | 1 | • • Bearing | | |
| 38 | 183668 | 1 | • • Roller bearing | | |
| 39 | 897772 | 1 | • • Oil deflector | | |
| 40 | 925256 | 1 | • O-ring | IK | |
| 41 | 941826 | X | • Adjusting washer | | TH = 0,05 MM |
| | 941827 | X | • Adjusting washer | | TH = 0,2 MM |
| | 948230 | X | • Shim | | TH = 0,35 MM |
| 42 | 839253 | 1 | • Sealing ring | IK | |

| REF | PART NO. | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|----------|-----|------------------------|-------------|-----------------------------------|
| 43 | 914538 | 1 | • Lock ring | | |
| 44 | 832675 | 1 | • Washer | | |
| 45 | 956000 | 1 | • O-ring | IK | |
| 46 | 943871 | X | • Shim | | TH = 0,05 MM |
| | 943872 | X | • Shim | | TH = 0,1 MM |
| | 943873 | X | • Shim | | TH = 0,2 MM |
| 47 | 839013 | 1 | • Washer | | |
| 48 | 851293 | 1 | • Screw | | |
| 49 | 850275 | 1 | • Axle shaft | | |
| 50 | 850276 | 1 | • Intermediate section | | |
| 50A | 925257 | 1 | • O-ring | | |
| 51 | 965185 | 6 | • Flange screw | | |
| 52 | 925267 | 1 | • O-ring | IK | |
| 53 | 851494 | X | • Adjusting washer | | TH = 0,1 MM |
| | 851495 | X | • Adjusting washer | | TH = 0,15 MM |
| | 851496 | X | • Adjusting washer | | TH = 0,35 MM |
| 54 | 183668 | 1 | • Roller bearing | | |
| 54A | 851699 | 1 | • Spacer ring | | |
| 54B | 852184 | 1 | • Shim | | TH = 0,05 MM |
| | 84219 | 1 | • Adjusting washer | | TH = 0,1 MM |
| | 84218 | 1 | • Spacer | | TH = 0,35 MM |
| 54C | 183328 | 1 | • Cup | | |
| 54D | 183327 | 1 | • Cone | | |
| 55 | 851678 | 1 | • Bearing housing | | |
| 56 | 946671 | 6 | • Flange screw | | |
| 57 | 944530 | 1 | • Ring | | |
| 58 | 851679 | 1 | • Spacer ring | | |
| 59 | 959026 | 1 | • Sealing ring | | |
| 60 | 925063 | 1 | • O-ring | | |
| 61 | 852072 | 1 | • Slip clutch | | |
| 62 | 925069 | 1 | • • O-ring | | |
| 62A | 925092 | 1 | • • O-ring | | |
| 62B | 925263 | 2 | • • O-ring | | |
| 62C | 955299 | 8 | • • Screw | | |
| 63 | 850471 | 1 | • Washer | | |
| 64 | 947855 | 1 | • Lock nut | | |
| 65 | 839504 | 1 | • Shift mechanism | | |
| 66 | 839505 | 1 | • • Bearing housing | | |
| 67 | 897816 | 1 | • • Eccentric piston | | |
| | | | • • Bulletin P-44-1-7 | P-44-1-7-EN | Shift mechanism, eccentric piston |
| 68 | 814603 | 1 | • • Dog | | |
| 69 | 814184 | 1 | • • Spring | | |
| 70 | 897711 | 1 | • • Screw | | |
| 71 | 897871 | X | • • Adjusting washer | | TH = 0,2 MM |
| 72 | 958838 | 1 | • • Sealing ring | IK | |
| 73 | 951924 | 1 | • • Tensioning din | IK | |
| 74 | 942871 | 1 | • • Pin | | |
| 75 | 925093 | 1 | • • O-ring | IK | |
| 76 | 955273 | 4 | • Screw | | |
| 77 | 941906 | 8 | • Spring washer | | |
| 77A | 942000 | 2 | • Screw | | |
| 78 | 850350 | 1 | • Cable attachment | | |
| 79 | 819068 | 1 | • Washer | | |
| 80 | 819067 | 1 | • Brace | | |
| 81 | 946577 | 2 | • Lock nut | | |
| 81A | 940090 | 2 | • Washer | | |
| 82 | 955246 | 2 | • Screw | | |
| 83 | 852363 | 1 | • Lever | | (834021) |
| 84 | 955781 | 2 | • Nut | | |
| 85 | 955948 | 2 | • Lock washer | | |
| 86 | 955270 | 2 | • Screw | | |
| 87 | 804312 | 1 | • Cube | | |
| 88 | 955892 | 1 | • Washer | | |
| 89 | 17276 | 1 | • Cotter pin | | |

| REF | PART NO. | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|----------|-----|-------------------|----------|---------------|
| 90 | 851786 | 2 | • Oil cooler | | |
| 91 | 852007 | 1 | • Connection pipe | | |
| 92 | 851730 | 1 | • Connection pipe | | |
| 93 | 960169 | 4 | • O-ring | IK | |
| 94 | 959207 | 4 | • Screw | | |
| 95 | 804107 | 2 | • Zinc electrode | | |
| 96 | 800475 | 2 | • Plug | | |
| 97 | 839351 | 1 | • Oil dipstick | | |
| 98 | 897682 | 1 | • Gasket | | |
| 99 | 955974 | 1 | • O-ring | | |
| 100 | 814179 | 1 | • Plug | | |
| | 875628 | 1 | Gasket kit | | SEE GROUP 10A |