



7324

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	847426	1		
2		1	• HOUSING	
3	180707	6	• Plug	
4	18836	6	• Gasket	IK
5	239982	6	• Tappet	
6	240779	6	• • Bolt	
7	240780	6	• • Bushing	
8	240781	6	• • Roller	
9	238379	6	• • Plate	
10	244685	6	• Spring disc	
11	847277	6	• Spring	
12	239984	6	• Spring disc	
13	240782	6	• Control sleeve	
14	239991	6	• Cover	
15	241677	6	• Washer	
16	239990	6	• Lock ring	IK
17	240002	6	• O-ring	IK
18	243263	1	• Plug	
19	240017	1	• Gasket	IK
20	844990	X	• Adjusting washer	TH = 0,4 MM
	847428	X	• Adjusting washer	TH = 0,45 MM
	844991	X	• Adjusting washer	TH = 0,5 MM
	847429	X	• Adjusting washer	TH = 0,6 MM
	844992	X	• Adjusting washer	TH = 0,7 MM
	844993	X	• Adjusting washer	TH = 0,8 MM
	847430	X	• Adjusting washer	TH = 0,85 MM
	845238	X	• Adjusting washer	TH = 0,9 MM
	844994	X	• Adjusting washer	TH = 1,0 MM
	844995	X	• Adjusting washer	TH = 1,1 MM
	244633	X	• Adjusting washer	TH = 1,2 MM
	844996	X	• Adjusting washer	TH = 1,25 MM
	244634	X	• Adjusting washer	TH = 1,3 MM
	847431	X	• Adjusting washer	TH = 1,35 MM
	244635	X	• Adjusting washer	TH = 1,4 MM
	847432	X	• Adjusting washer	TH = 1,45 MM
	244381	X	• Adjusting washer	TH = 1,5 MM
	244382	X	• Adjusting washer	TH = 1,6 MM
	244383	X	• Adjusting washer	TH = 1,7 MM
	244384	X	• Adjusting washer	TH = 1,8 MM
	244385	X	• Adjusting washer	TH = 1,9 MM
	244386	X	• Adjusting washer	TH = 2,0 MM
	847433	X	• Adjusting washer	TH = 2,1 MM
21	244379	6	• Bushing	
22	240422	12	• O-ring	IK
23	244470	6	• Pump element	
24	244471	6	• Delivery valve	
25	239993	6	• Gasket	IK
26	240969	6	• Spring	
27	240001	6	• Gasket	IK
28	243742	6	• Delivery valve retai	
29	243743	12	• Washer	
30	941908	12	• Spring washer	
31	943927	12	• Nut	
32	244380	12	• Stud	
33	240011	1	• Cover	
34	956209	2	• Screw	
35	18891	2	• Lock washer	
36	241746	1	• Control rod	
37	240014	2	• Guide sleeve	
38	240015	1	• Bushing	
39	244008	1	• Lock pin	
40	240971	6	• Plug	

REF	PART NO.	QTY	DESCRIPTION	NOTES
41	240972	X	· Washer	TH = 0,2 MM
	240973	X	· Washer	TH = 0,5 MM
42	240789	1	· Camshaft	
43	240426	1	· Bearing	
44	940326	2	· Screw	
45	941906	2	· Spring washer	
46	240023	2	· Roller bearing	
47	240022	1	· Sealing ring	IK
48	243299	1	· O-ring	IK
49	240024	X	· Adjusting washer	TH = 0,10 MM
	240025	X	· Adjusting washer	TH = 0,12 MM
	240026	X	· Adjusting washer	TH = 0,14 MM
	240027	X	· Adjusting washer	TH = 0,16 MM
	240028	X	· Adjusting washer	TH = 0,18 MM
	240029	X	· Adjusting washer	TH = 0,30 MM
	240030	X	· Adjusting washer	TH = 0,50 MM
50	240021	1	· Cover	
51	956094	4	· Screw	
52	941906	4	· Spring washer	IK
53	955806	1	· Nut	
54	955927	1	· Spring washer	IK
55	35168	1	· Key	IK
56	240032	1	· Ring	
57	240033	X	· Adjusting washer	TH = 1,2 MM
	240034	X	· Adjusting washer	TH = 1,5 MM
	240035	X	· Adjusting washer	TH = 1,8 MM
	240036	X	· Adjusting washer	TH = 2,0 MM
58	240947	1	· Cover	
59	240948	1	· Gasket	IK
60	956205	12	· Screw	
61	239896	1	· Gasket	IK
62	130673	3	· Stud	IK
63	940197	3	· Nut	
64	941906	3	· Spring washer	IK
65	844988	1	· Plug	
66	239897	1	· Gasket	
67	35096	1	· Overflow valve	
68	238614	1	· Peg	
69	845193	1	· Spring	
70	25540	1	· Bushing	
71	847439	1	· Screw	
72	239897	1	· Gasket	
	845240	1	Small parts kit	