



15148

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	860417	1	Bracket	
2	965175	2	Screw	
3	860611	1	Bracket	
4	947760	1	Flange screw	L=40mm
	948217	1	Flange screw	L=45mm
5	873551	1	Wiring harness	(873055)
6	948210	X	Strip clamp	
7	955119	4	Screw	
8	966689	1	Fuse	
9	872616	1	Relay	
10	955138	2	Screw	
11	955893	1	Washer	
12	860779	1	Cover	
13	846736	3	Lock screw	
13A	941904	3	Spring washer	
14	960137	3	Washer	
15	860339	2	Relay	12V 50A
16	955138	2	Screw	
17	846648	1	Extension cable	L=3,0m
	846649	1	Extension cable	L=5,0m
	846650	1	Extension cable	L=7,0m
18	1140598	1	Y-koppling	For double steering positions.
19	856355	1	Fuse	
20		1	Cable kit	POWER TRIM
21		1	Cable kit	POWER TRIM SEE GROUP 44
22	955781	2	Nut	
23	1234326	1	Protective cap	
24	960140	1	Washer	
25	955893	2	Washer	
26	947542	1	Screw	
27	955893	3	Washer	
28	945407	1	Flange nut	
29	866835	1	Pressure sensor	0-10bar
	866836	1	Pressure sensor	ALT. For double steering positions.
30	863169	1	Pressure monitor, oil-pressure	0,7bar
31	873066	1	Thermo monitor, coolant water temp.	97°C
32	827151	1	Temperature sensor, coolant water temp.	40-120°C
	840074	1	Temperature sensor	ALT. For double steering positions.
33	957181	2	Gasket	
34	862251	1	Tachometer sensor	For revolution relay.
35	957181	1	Gasket	
36	860970	1	Bracket	
37	965175	1	Screw	
38	872597	1	Sender	
39	956050	2	Screw	
40	955890	4	Washer	
41	966650	2	Lock nut	
42	948210	X	Strip clamp	