



4414

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	HEAT EXCHANGER AND THERMOSTAT WITH INSTALLATION COMPONENTS	02B-0385	
2		1	EXPANSION TANK WITH INSTALLATION COMPONENTS	02B-0390	
3		1	OIL COOLER AND INSTALLATION COMPONENTS	02B-0675	
4		1	SEA WATER PUMP AND INSTALLATION COMPONENTS	02B-0930	
5		1	CIRCULATION PUMP WITH INSTALLATION COMPONENTS	02B-1230	
6		1	TURBO AND AIR FILTER WITH INSTALLATION COMPONENTS	02B-1480	
7		1	INDUCTION MANIFOLD AND AFTER COOLER WITH INSTALLATION COMPONENTS	02B-1985	
8		1	EXHAUST MANIFOLD AND INSTALLATION COMPONENTS	02B-1990	
9	842270	1	Coolant pipe	02B-0930	
10	949658	2	O-ring	IK	
11	842271	1	Coolant pipe		
12	955524	1	Screw		
13	941907	1	Spring washer		
14	947893	1	Drain cock		
15	925064	1	O-ring	IK	02B-1985
16	842273	1	Coolant pipe		
17	949658	1	O-ring	IK	
18	947893	1	Drain cock		
19	949658	2	O-ring	IK	
20	842272	1	Coolant pipe		
21	842501	1	Attaching plate		
22	952635	2	Clamp		
23	950045	4	Screw		
24	941906	4	Spring washer		
25		1	SEA WATER FILTER		SEE GROUP 9
26		1	SEA WATER INTAKE		SEE GROUP 9