



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	846807	1	Turbo		
	3802021	1	Turbocharger, exch		Exchange unit
	847206	1	Turbo COMPONENTS NOT SPEC.	02B-2360	ALT CLASS
2	421324	1	Gasket		
3	943883	4	Stud		
4	940183	4	Nut		
5	940097	4	Washer		
6	942336	4	Spring washer		
7	469510	1	Intermediate pipe		
8	469509	1	Sealing ring		
9	469508	1	Sealing ring		
10	846625	1	Connection pipe		
11	424619	1	Gasket		
12	956570	4	Screw		
13	941907	4	Spring washer		
14	846808	1	Tube		
15	420641	1	Gasket		
16	955297	1	Screw		L = 25 MM
	940142	1	Screw		L = 30 MM
17	941907	2	Spring washer		
18	942007	1	Hollow screw		
19	11998	1	Gasket		
20	942703	1	Gasket		
21	846809	1	Tube		
22	842986	1	Gasket		
23	955299	2	Screw		
24	941907	2	Spring washer		
25	469601	1	Sealing ring		
26	469542	1	Connector		
27	469543	1	Flange		
28	846810	1	Nipple		
29	191929	1	Hollow screw		
30	925059	2	O-ring		
31	947627	2	Gasket		
32	846671	1	Tube		
33	191157	1	Hollow screw		
34	947627	4	Gasket		
35	191158	1	Hollow screw		
36	949918	1	Drain cock		
37	846810	2	Nipple		
38	925059	4	O-ring		
39	846687	1	Tube		
40	846810	2	Nipple		
41	925059	4	O-ring		
42	191157	2	Hollow screw		
43	947627	4	Gasket		
44		1	BRACKET		
45	952625	1	Clamp		D = 9.5 MM
46	952631	1	Clamp		D = 19 MM
47	940094	1	Screw		
48	941906	1	Spring washer		
49	955893	1	Washer		
50	955825	1	Nut		
51	955558	1	Screw		
52	940280	1	Spring washer		
53		1	INDUCTION AND EXHAUST PIPE	02B-1825	
54	836057	1	Exhaust riser		
55	424631	1	Gasket		
56	924077	4	Stud		
57	942336	4	Spring washer		
58	943927	4	Nut		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
59	820900	1	Exhaust hose		L = 590 MM
60	862594	2	Gasket		
61	836153	1	Exhaust pipe flange		
62	955592	8	Screw		
63	955829	8	Nut		
64	941912	8	Spring washer		
65	843087	1	Compensator		L = 85 MM
	843088	1	Compensator		L = 185 MM
66	862594	2	Gasket		
67	955365	8	Screw		
68	941912	8	Spring washer		
69	820905	1	Connection flange		
70	836257	1	Muffler		L = 1370 MM
71	846414	2	Flange		
72	862977	2	Gasket		
73	955366	16	Screw		
74	955785	16	Nut		
75	941912	16	Spring washer		
76	914392	2	Plug		
77	846624	1	Bracket		WHEN EMERGENCY STOP IS INSTALLED.
78	955523	2	Screw		WHEN EMERGENCY STOP IS INSTALLED.
79	941907	2	Spring washer		WHEN EMERGENCY STOP IS INSTALLED.
80	842280	1	Air filter		WHEN EMERGENCY STOP IS INSTALLED.
81	943484	1	Hose clamp		WHEN EMERGENCY STOP IS INSTALLED.
82	843409	1	Fitting		WHEN EMERGENCY STOP IS INSTALLED.
	842281	1	Hose		
83	853012	1	Hose clamp		WHEN EMERGENCY STOP IS INSTALLED.
	943481	1	Hose clamp		
84	847088	1	Bracket		WHEN EMERGENCY STOP IS INSTALLED.
85	942921	1	Hose clamp		WHEN EMERGENCY STOP IS INSTALLED.
86		1	EMERGENCY STOP		SEE GROUP 3
87	845662	1	Ring		WHEN EMERGENCY STOP IS INSTALLED.
88	862590	1	Gasket		WHEN EMERGENCY STOP IS INSTALLED.
89	925093	2	O-ring		WHEN EMERGENCY STOP IS INSTALLED.
90	959222	1	Screw		L = 25 MM
	959224	1	Screw		L = 35 MM
	959233	1	Screw		L = 80 MM
91	941907	3	Spring washer		