



6880

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	846241	1	Turbo		
	3802018	1	Turbocharger, exch		Exchange unit
				02B-2400	
2	945851	4	Stud		
3	191894	4	Nut		
4	942336	4	Spring washer		
4A	940097	4	Washer		
5	848141	1	Tube		
6	848142	1	Tube		
7	949918	2	Drain cock		
8	831622	4	Gasket		
9	847492	4	Nipple		
10	947628	4	Gasket		
11	955271	8	Screw		
12	941906	8	Spring washer		
13	822572	1	Tube		
14	940115	2	Screw		
15	942336	2	Spring washer		
16	468629	1	Elbow nipple		
17	466328	1	Rubber hose		
18	943474	2	Hose clamp		
19	822571	1	Tube		
20	942007	1	Hollow screw		WHEN OIL SUPERVISION IS NOT INSTALLED.
20A	942008	1	Hollow screw		SEE GROUP 3. WHEN OIL SUPERVISION IS INSTALLED.
21	942703	1	Gasket		
22	11998	1	Gasket		
23	820851	2	Clamp		
24	955512	1	Screw		
25	941906	1	Spring washer		
26	956584	1	Screw		
27	956585	1	Screw		
28	942336	2	Spring washer		
29	822625	1	Bracket		
30	842423	1	Exhaust riser		
31	424626	1	Gasket		
32	953259	6	Stud		
33	191894	6	Nut		
34	942336	6	Spring washer		
35	836887	1	Flange		
36	862593	2	Gasket		
37	955592	16	Screw		
38	955829	16	Nut		
39	941912	16	Spring washer		
40	914392	2	Plug		
40A	947626	2	Gasket		
41	836880	1	Hose		L = 590 MM
42		1	INDUCTION AND EXHAUST MANIFOLD WITH INSTALLATION COMPONENTS	02B-1895	
43	837481	1	Intake bend	02B-1970	
44	862588	1	Gasket	02B-1970	
45	956570	4	Screw	02B-1970	
46	941907	4	Spring washer	02B-1970	
47	470327	1	Hose		
48	1544731	2	Hose clamp		
49	1543360	1	Gasket	IK	INCLUDED IN TURBO COMPRESSOR.
50	470939	1	Gasket	IK	INCLUDED IN TURBO COMPRESSOR.
51	420641	1	Gasket	IK	INCLUDED IN TURBO COMPRESSOR.

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
52	823369	1	Plug		SEE GROUP 2A
53	469328	1	Gasket		SEE GROUP 2A
54	955588	2	Screw		
55	941912	2	Spring washer		
56	821028	2	Tensioning band		
57	31404	2	Pin		
58	31405	2	Pin		
59	31406	2	Screw		
60	842280	2	Air filter		
61	842853	1	Connection pipe		
62	925078	2	O-ring		
63	925082	4	O-ring		
64	842850	1	Bracket		
65	836257	1	Muffler		L = 1370 MM
66	846414	2	Flange		
67	862977	2	Gasket		
68	955366	16	Screw		
69	955785	16	Nut		
70	941912	16	Spring washer		
71		1	EMERGENCY STOP		SEE GROUP 3
72	862590	1	Gasket		WHEN EMERGENCY STOP IS INSTALLED.
73	843704	1	Attaching ring		WHEN EMERGENCY STOP IS INSTALLED.
74	843703	1	Clamping ring		WHEN EMERGENCY STOP IS INSTALLED.
75	959223	2	Screw		WHEN EMERGENCY STOP IS INSTALLED.
	959233	1	Screw		WHEN EMERGENCY STOP IS INSTALLED.
76	941907	3	Spring washer		WHEN EMERGENCY STOP IS INSTALLED.
77	940374	2	Clamp		
78	956570	2	Screw		
79	955894	2	Washer		