



10616

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	860027	2	Engine bracket		FRONT. WITH HOLE FOR M16 ADJUSTING BOLT
	860953	2	Engine bracket		FRONT. WITH HOLE FOR M18 ADJUSTING BOLT
2	965192	8	Flange screw		L = 40 MM
3	940280	8	Spring washer		
4	859375	1	Engine bracket		P. REAR. WITH HOLE FOR M16 ADJUSTING BOLT
	860952	1	Engine bracket		P. REAR. WITH HOLE FOR M18 ADJUSTING BOLT
4	860954	1	Engine bracket		S.B. REAR. WITH HOLE FOR M18 ADJUSTING BOLT
5	940280	4	Spring washer		
	955897	2	Washer		
6	966343	3	Screw		L = 35 MM
	966343	1	Screw		L = 35 MM
	965226	2	Flange screw		L = 45 MM
7	829976	4	Rubber element		WITH M16 ADJUSTING BOLT
			Bulletin 44-26	44-26-EN	Reinforced Rubber Cushion
7	876597	4	Rubber element		WITH M18 ADJUSTING BOLT
8	955900	4	· Washer		
9	829567	4	· Adjuster screw		M16
	860950	4	· Adjuster screw		M18
10	955805	8	Nut		M16
	955806	8	Nut		M18
11	191940	6	Washer		D = 40 MM. FOR M16 ADJUSTING BOLT
	955900	2	Washer		D = 30 MM. FOR M16 ADJUSTING BOLT
	955901	4	Washer		D = 34 MM. FOR M18 ADJUSTING BOLT
	978991	4	Washer		D = 40 MM. FOR M18 ADJUSTING BOLT
11A	941912	4	Spring washer		FOR M16 ADJUSTING BOLT
	941913	4	Spring washer		FOR M18 ADJUSTING BOLT