



10620

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	854027	1	Intermediate housing	REPL BY 854033+814397
	854033	1	Intermediate housing	
2	897829	1	• Gear yoke	
3	814397	1	• Coupling rod	
4	897447	1	• Shaft	
5	897511	1	• Washer	
6	17253	1	• Split pin	
7	925259	1	O-ring	
8	943252	X	Shim	TH = 0,05 MM
	943866	X	Shim	TH = 0.1mm
	943867	X	Shim	TH = 0.2mm
	967557	X	Shim	TH = 0,30mm
	943868	X	Shim	TH = 0.4mm
9	876168	1	Suspension fork	
10	940194	1	• Lubricating nipple	
11	814388	1	• Bushing	
12	183391	1	• Needle roller bushin	
13	181620	2	• Sealing ring	
13A	853717	1	• Decal	
13B		1	• Decal	
14	959456	2	Hex. socket screw	
15	942551	2	Washer	
16	814390	2	Plastic washer	ALT
17	941885	2	Lock nut	
18	897448	1	Control rod	
19	813954	1	Fork	
20	940190	1	Hexagon nut	
21	192662	1	Split pin	
22	17253	2	Split pin	
23	814386	1	Steering knuckle	
24	941820	1	O-ring	
25	897696	1	Washer	
26	941809	1	Hex. socket screw	
27	941808	2	Hex. socket screw	
28	854031	1	Hose connection	SEE GROUP 4A
29	814356	1	Sealing	
30	941813	2	Hex. socket screw	
31	897644	1	Tube	
32	125017	2	O-ring	ONE O-RING SHOULD BE INSTALLED BETWEEN UPPER GEAR UNIT AND INTERMEDIATE HOUSING. O-RING NUMBER TWO,SHOULD BE INSTALLED BETWEEN LOWER GEAR UNIT AND INTERMEDIATE HOUSING.
33		1	Cable attachment	
34	940168	2	Hexagon screw	
35	940191	2	Washer	
36	876278	1	Bushing kit	Includes two bushings
37	804312	1	Cube	
38	907834	1	Split pin	
39	940191	2	Washer	
40	854030	1	Latch	
41	814391	2	• Latch	
42	814389	1	• Bearing sleeve	
43	814422	2	• Spacer washer	
44	852046	1	• Push rod	
45		1	• • NUT	
46	897722	1	• Thrust sleeve	
47	814394	1	• Lock brace	
48	814395	2	• Spindle	
49	832534	1	• Spring	
50	814399	1	• Shaft	
51	943194	1	• Washer	
52	814392	1	• Spring hook	
53	814419	1	• Shaft	
54	814393	1	• Spring hook	
55	943197	2	• Lock nut	

