



7386

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	1336775	1	Camshaft		
2	949433	1	• Pin		
3		5	BEARING CAP	02A-1200	
4	463690	10	Guide sleeve	02A-1200	
5	1306333	1	Sealing ring	IK	
6	1357572	1	Washer		
7	855473	1	Wheel, WHEEL		(831972)
				02A-0950	
8	463580	1	Washer		
9	955322	1	Screw		
10	419652	4	Valve guide, INTAKE	02A-1200	
11	463771	4	Valve guide, EXHAUST	02A-1200	
12		4	VALVE SEAT, INTAKE		STD
	1266418	4	Seat ring, INTAKE		OVER SIZE 0,50 MM
13		4	VALVE SEAT, EXHAUST		STD
	1266421	4	Seat ring, EXHAUST		OVER SIZE 0,50 MM
14	463395	4	Inlet valve, INTAKE		
15	463526	4	Exhaust valve, EXHAUST		
16	1306630	4	Valve seal	IK	INLET
17	463399	8	Washer		
18	463739	8	Valve spring		
19	1266797	8	Washer		
20	419643	16	Valve collet		
21	3514432	8	Rubber ring	IK	(1219648)
22	463075	8	Valve depressor		
23	463546	8	Adjusting washer		TH = 3,30 MM
	463547	X	Adjusting washer		TH = 3,35 MM
	463548	X	Adjusting washer		TH = 3,40 MM
	463549	X	Adjusting washer		TH = 3,45 MM
	463550	X	Adjusting washer		TH = 3,50 MM
	463551	X	Adjusting washer		TH = 3,55 MM
	463552	X	Adjusting washer		TH = 3,60 MM
	463553	X	Adjusting washer		TH = 3,65 MM
	463554	X	Adjusting washer		TH = 3,70 MM
	463555	X	Adjusting washer		TH = 3,75 MM
	463556	X	Adjusting washer		TH = 3,80 MM
	463557	X	Adjusting washer		TH = 3,85 MM
	463558	X	Adjusting washer		TH = 3,90 MM
	463559	X	Adjusting washer		TH = 3,95 MM
	463560	X	Adjusting washer		TH = 4,00 MM
	463561	X	Adjusting washer		TH = 4,05 MM
	463562	X	Adjusting washer		TH = 4,10 MM
	463563	X	Adjusting washer		TH = 4,15 MM
	463564	X	Adjusting washer		TH = 4,20 MM
	463565	X	Adjusting washer		TH = 4,25 MM
	463566	X	Adjusting washer		TH = 4,30 MM
	463567	X	Adjusting washer		TH = 4,35 MM
	463568	X	Adjusting washer		TH = 4,40 MM
	463569	X	Adjusting washer		TH = 4,45 MM
	463570	X	Adjusting washer		TH = 4,50 MM