



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	840808	1	Starter motor		
				030-1550	
2	955351	2	Screw		
3	940280	2	Spring washer		
4	855314	1	Nut		
5	941907	1	Spring washer		
6	940199	1	Screw		
7	855798	1	Protecting sleeve		(855318)
8	829714	1	Seal		
9	856355	1	Fuse		EARLY TYPE, 55A
10	852986	1	Current bar		EARLY TYPE
11	941906	1	Spring washer		EARLY TYPE
12	955781	1	Nut		EARLY TYPE
13		X	CABLE AND TERMINALS	030-2235	
14		1	DISTRIBUTOR WITH INSTALLATION COMPONENTS	030-0800	
15	1332114	1	Retainer		
15A	1332113	3	Retainer		
16	834621	1	Nipple		
17	834629	1	Temperature sensor		
18	944485	1	Spade terminal		
19	876077	1	Spark plug kit		
20	876078	1	Ignition cable kit		
21	855612	1	Control unit		TO BE ATTACHED IN THE ENGINE ROOM.
21A	3287677	1	· Coil		
22	1336660	1	Sender		
23	463690	2	Guide sleeve		
24	946934	2	Flange screw		
25	834920	1	Oil pressure sensor		
26	968713	1	Nipple		
27	18671	1	Gasket		
28	180759	1	Plug		
29	813615	1	Nipple		
30	968882	1	Screw		
31	855524	1	Cable trunk		
32	834784	1	Resistor		
33	841178	1	Fuse		
34	841177	1	Relay		
35	855514	1	Bracket		
36	950013	2	Screw		
37	948210	X	Strip clamp		
38		1	ALTERNATOR AND INSTALLATION COMPONENTS	030-1010	
39	841958	1	Instrument panel		USA
				030-2125	
	841960	1	Instrument panel		EUR., EARLY TYPE
				030-2125	
	856015	1	Instrument panel		EUR, REPL BY 856674
				030-2126	
	856674	1	Instrument panel		
				030-2126	
40	941950	1	Clamp		
41	946440	1	Flange screw		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES