



9217

| REF | PART NO. | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|----------|-----|--|----------|--------------------|
| 1 | 855326 | 1 | Starter motor | | |
| | | | | 030-0450 | |
| 2 | 835424 | 1 | Screw | | |
| 3 | 835425 | 1 | Screw | | |
| 4 | 942336 | 2 | Spring washer | | |
| 5 | 855315 | 1 | Anchorage | | |
| 6 | 940113 | 1 | Screw | | |
| 7 | 941907 | 1 | Spring washer | | |
| 8 | 941906 | 1 | Spring washer | | |
| 9 | 955825 | 1 | Nut | | |
| 9A | 841194 | X | Adjusting washer | | |
| 10 | | 1 | ALTERNATOR AND INSTALLATION COMPONENTS | 030-0194 | |
| | | | | | |
| 11 | 958498 | 1 | V-belt | | SEE GROUP 2B |
| 12 | 835630 | 1 | Temperature sensor | | SEE GROUP 2B |
| | 835649 | 1 | Sender | | FOR FLYING BRIDGE. |
| 13 | 855705 | 1 | Distributor, DISTRIBUTOR | | |
| | | | | 030-0210 | |
| | | | | | |
| 14 | 835154 | 1 | Gasket | IK | |
| 15 | 841530 | 1 | Clamp | | |
| 16 | 855824 | 1 | Screw | | |
| 17 | 941744 | 1 | Washer | | |
| 18 | 948210 | X | Strip clamp | | |
| 19 | 855678 | 2 | Ignition cable | | CYL 1,2 |
| | 855677 | 2 | Ignition cable | | CYL 3,4 |
| | 855676 | 2 | Ignition cable | | CYL 5,6 |
| | 855675 | 2 | Ignition cable | | CYL 7,8 |
| 20 | 856272 | 1 | Ignition cable | | (855674) |
| 21 | 876047 | 2 | Spark plug kit | | |
| 22 | 855706 | 1 | Ignition coil | | |
| 23 | 834772 | 2 | Nut | | |
| 24 | 855741 | 1 | Bracket | | SEE GROUP 2D |
| 25 | 1219561 | 1 | Clamp | | |
| 26 | 834371 | 1 | Screw | | |
| 27 | 834784 | 1 | Resistor | | |
| 28 | 835429 | 2 | Retainer | | |
| 29 | 835428 | 2 | Retainer | | |
| 30 | 841426 | 2 | Screw | | |
| 31 | 835427 | 2 | Retainer | | |
| 32 | 835980 | 1 | Nipple | | |
| 33 | 809109 | 1 | Elbow nipple | | |
| 34 | 834920 | 1 | Oil pressure sensor | | |
| | 834921 | 1 | Oil pressure sensor | | FOR FLYING BRIDGE. |
| 35 | 841178 | 1 | Fuse | | 40A |
| 36 | 950013 | 2 | Screw | | |
| 37 | 855757 | 1 | Cable trunk | | |
| 38 | | X | CABLE AND CABLE TERMINALS | 030-0625 | |
| 39 | | X | EXTENSION CABLE | | |
| 40 | 841958 | 1 | Instrument panel | | |
| | | | | 030-0560 | |
| | 841960 | 1 | Instrument panel | | |
| | | | | 030-0570 | |
| 41 | 942810 | 1 | Clamp | | |
| 42 | 955534 | 1 | Screw | | |
| 43 | 942336 | 1 | Spring washer | | |
| 44 | 841426 | 3 | Screw | | |
| 45 | 1585449 | 1 | Gasket | | |
| 46 | 852986 | 1 | Current bar | | |
| 47 | 855330 | 1 | Nut | | |
| 48 | 855798 | 1 | Protecting sleeve | | |

| REF | PART NO. | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|----------|-----|------------------------------|----------|------------------|
| 49 | 940109 | 1 | Lock washer | | |
| 50 | 970943 | 1 | Screw | | (955314) |
| 51 | 856355 | 2 | Fuse | | 55A (853502) |
| 52 | 941906 | 1 | Spring washer | | |
| 53 | 955781 | 1 | Nut | | |
| 54 | 853572 | 1 | Protective cap | | SERIAL NO 64892- |
| 55 | 941905 | 2 | Spring washer | | |
| 56 | 955780 | 2 | Nut | | |
| 57 | 841177 | 1 | Relay | | |
| 58 | 855870 | 1 | Race gard | | |
| 59 | 841043 | 1 | Cable kit | | |
| | | X | · CABLES AND CABLE TERMINALS | 030-0625 | |