



TD100A,D100B

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	ALTERNATOR AND INSTALLATION COMPONENTS	030-0500	
2		1	STOP SOLENOID		SEE GROUP 2D
3	837619	1	Attaching plate		
4	837620	1	Attaching plate		
5	952627	1	Clamp		
6	950047	2	Screw		
7	955825	2	Nut		
8	941906	2	Spring washer		
9	241608	2	Protective sleeve		
10	881192	2	Cable union		
11			LEAD CABLES		
12	948210	X	Strip clamp		(827353)
13			CABLE HOLDER		
14	950144	3	Screw		L = 13 MM
15	940133	1	Screw		L = 16 MM
	955558	1	Screw		L = 19 MM
16	940280	1	Spring washer		1/2"
	942336	1	Spring washer		3/8"
	120265	3	Washer		1/4"
17	827150	1	Temperature sensor		
18	11996	1	Gasket		
19	1507899	1	Tachometer sensor		
20	76614	2	Rubber collar		
21	823515	1	Protection		REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
22	823517	1	Gasket		REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
23	823516	1	Cover		REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
24	191038	4	Screw		REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
25	941905	4	Spring washer		REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
26	943484	2	Hose clamp		(951801). REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
27	881192	1	Cable union		REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
28	881193	2	Cable union		REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
29	880755	2	Nut		REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
30	823700	X	Rubber moulding		L = 300 MM. REPLACED BY 1 ALTERATOR 841765 AND 1 CABLE UNIT 841822.
31	837377	1	Electrical distribut		
32	837378	1	Cover		
33	837379	1	Cover		
34	837485	2	Clamping sleeve		
35	837483	1	Guide rail		
36	837484	1	Guide rail		
37	837486	4	Housing		
38	837488	1	Sealing strip		
39	881518	1	Cable terminal		
40	837558	1	Rubber guard		
41	192618	X	Hose		L = 50 MM
42	946945	1	Stud		
43	955825	2	Nut		
44	955513	1	Screw		
45	940117	3	Screw		
46	941906	6	Spring washer		
47	870998	1	Starter motor		24V REPL BY 847308

TD100A,D100B

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
47				030-0700	
	847308	1	Starter motor		24V
			COMPONENTS NOT SPEC.		
48	953486	3	Stud		
49	955827	3	Nut		
50	942336	3	Spring washer		
51		1	CONNECTING BOX	030-0200	
			INSTALLATION COMPONENTS		
52	837391	1	Housing		
53	837392	1	Cover		
54	956301	2	Screw		
55	956568	2	Screw		
56	955949	2	Lock washer		
57	837396	1	Lock washer		
58	956076	1	Screw		
59	941905	1	Spring washer		
60	837424	1	Gasket		
61	837473	1	Thermo monitor		CAN'T BE USED ON ALTERNATOR 841765.
62	837472	1	Thermo monitor		AQ290A MO-20459.
63	836716	1	Temperature contact		AQ290A MO-20459.. AQ290A MO 20460-.
64	836717	1	Temperature contact		CAN'T BE USED ON ALTERNATOR 841765.. AQ290A MO 20460-.
65	836718	2	Sleeve		
66	836719	1	Clamp		AQ290A MO 20460-.
67	836720	1	Washer		AQ290A MO 20460-.
68	950020	2	Screw		AQ290A MO 20460-.
69	941905	2	Spring washer		AQ290A MO 20460-.
70	836722	1	Housing		AQ290A MO 20460-.
71	836721	1	Cover		AQ290A MO 20460-.
72	950021	4	Screw		AQ290A MO 20460-.
73	955946	4	Lock washer		AQ290A MO 20460-.
74	881079	1	Terminal block		AQ290A MO 20460-.
75	950011	2	Screw		AQ290A MO 20460-.
76	955945	2	Washer		AQ290A MO 20460-.
77	956568	2	Screw		AQ290A MO 20460-.
78	955949	2	Lock washer		AQ290A MO 20460-.
79	837179	1	Gasket		AQ290A MO 20460-.
80	957184	2	Washer		