



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	240405	1	Injection pump		
2	240778	1			
3	239982	6	• Tappet		
4	240779	6	• • Bolt		
5	240780	6	• • Bushing		
6	240781	6	• • Roller		
7	238379	6	• • Plate		
8	239986	6	• Spring disc		
9	244085	6	• Adjusting plate		(239985)
10	239984	6	• Spring disc		
11	240782	6	• Control sleeve		
12	239991	6	• Cover		
13	241677	6	• Washer		
14	239990	6	• Lock ring		
15	240003	6	• Spacer ring		
16	240002	6	• O-ring		
17	240424	X	• Gasket		TH = 0.15 MM
	240004	X	• Gasket		TH = 0.40 MM
	240005	X	• Gasket		TH = 0.50 MM
	240006	X	• Gasket		TH = 0.60 MM
	240007	X	• Gasket		TH = 0.70 MM
	240008	X	• Gasket		TH = 0.80 MM
18		6	• BUSHING		INCLUDED IN FUEL INJECTOR.
19	239989	6	• O-ring		
20	240422	6	• O-ring		
21	239988	6	• Pump element		
22	240783	6	• Delivery valve		
23	239993	6	• Gasket		
25	238309	6	• Spring		
26	240784	6	• Washer		
27	240001	6	• Gasket		
28	243771	6	• Delivery valve retai		
29	240009	6	• Pressure plate		
30	240010	12	• Screw		
31	941908	12	• Spring washer		
32	955783	12	• Nut		
33	240011	1	• Cover		
34	956209	2	• Screw		
35	18891	2	• Lock washer		
36	240787	1			
37	240014	2	• Guide sleeve		
38	244008	1	• Lock pin		(131015)
39	240788	1			
40	238663	6	• Plug		
41	238312	X	• Adjusting washer		TH = 0.3 MM
	238314	X	• Adjusting washer		TH = 1.0 MM
42	240429	6	• Plug		
43	6637599	1	• Plug		
44	11996	1	• Gasket		
45	240121	1	• Plug		
46	956094	2	• Screw		
47	941906	2	• Spring washer		
48	240789	1	• Camshaft		
49	240426	1	• Bearing		
50	240427	2	• Screw		
51	941906	2	• Spring washer		
52	240023	1	• Roller bearing		
53	240022	1	• Sealing ring		
54	239460	1	• Gasket		
55	240024	X	• Adjusting washer		TH = 0.10 MM
	240025	X	• Adjusting washer		TH = 0.12 MM
	240026	X	• Adjusting washer		TH = 0.14 MM
	240027	X	• Adjusting washer		TH = 0.16 MM
	240028	X	• Adjusting washer		TH = 0.18 MM

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
55	240029	X	· Adjusting washer		TH = 0.30 MM
	240030	X	· Adjusting washer		TH = 0.50 MM
56	240021	1	· Cover		
57	956094	2	· Screw		L = 16 MM
	955269	2	· Screw		L = 12 MM
58	941906	4	· Spring washer		
59	955806	1	· Nut		
60	941913	1	· Spring washer		
61	35168	1	· Key		
62	240023	1	· Roller bearing		
63	240032	1	· Ring		
64	240033	X	· Adjusting washer		TH = 1.2 MM
	240034	X	· Adjusting washer		TH = 1.5 MM
	240035	X	· Adjusting washer		TH = 1.8 MM
	240036	X	· Adjusting washer		TH = 2.0 MM
65	240811	1	· Sealing ring		
66	240037	1	· Gasket		
67	240812	1	· Cover		
68		1	· COVER		REPL BY 240947+240948
69		1	· GASKET		
70	240947	1	· Cover		
71	240948	1	· Gasket		
72	956205	12	· Screw		
73	240790	1			
74	956097	2	· Screw		
75	941906	2	· Spring washer		
76	240791	1			
				02C-0850	
77	240804	1	· · Cold start device		
				02C-0950	
78	240072	1			REPL BY 243083
				02C-1000	
79	239896	1	· Gasket		
80	130673	3	· Stud		
81	941906	3	· Spring washer		
82	955781	3	· Nut		
83	241647	1	· Setting indicator		
84	955269	2	· Screw		
85	941906	2	· Spring washer		