



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	240406	1			
2	240909	1	• Governor	02C-0700	
3	240072	1		02C-1000	REPL BY 243083
4		1	• HOUSING		
5	239982	6	• Tappet		
6	240779	6	• • Bolt		
7	240780	6	• • Bushing		
8	240781	6	• • Roller		
9	238379	6	• • Plate		
10	239986	6	• Spring disc		
11	244085	6	• Adjusting plate		(239985)
12	239984	6	• Spring disc		
13	240782	6	• Control sleeve		
14	239991	6	• Cover		
15	241677	6	• Washer		
16	239990	6	• Lock ring		
17	240003	6	• Spacer ring		
18	240002	6	• O-ring		
19	240424	X	• Gasket		TH = 0.15 MM
	240004	X	• Gasket		TH = 0.40 MM
	240005	X	• Gasket		TH = 0.50 MM
	240006	X	• Gasket		TH = 0.60 MM
	240007	X	• Gasket		TH = 0.70 MM
	240008	X	• Gasket		TH = 0.80 MM
20		6	• BUSHING		INCLUDED IN FUEL INJECTOR.
21	239989	6	• O-ring		
22	240422	6	• O-ring		
23	239988	6	• Pump element		
24	240783	6	• Delivery valve		
25	239993	6	• Gasket		
26	238309	6	• Spring		
28	240001	6	• Gasket		
29	243771	6	• Delivery valve retai		
30	240009	6	• Pressure plate		
31	240010	12	• Screw		
32	941908	12	• Spring washer		
33	955783	12	• Nut		
34	240011	1	• Cover		
35	956209	2	• Screw		
36	18891	2	• Lock washer		
37	240425	2	• Control rod		
38	240014	2	• Guide sleeve		
39	244008	1	• Lock pin		(131015)
40	240015	1	• Bushing		
41	240121	2	• Plug		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
42	240017	1	• Gasket		
43	238663	6	• Plug		
44	238312	X	• Adjusting washer		TH = 0.2 MM
	241734	X	• Adjusting washer		TH = 0.5 MM
	238314	X	• Adjusting washer		TH = 1.0 MM
45	240429	6	• Plug		
46	243263	1	• Plug		LATE TYPE
	6637599	1	• Plug		EARLY TYPE
47	240017	1	• Gasket		LATE TYPE
	11996	1	• Gasket		EARLY TYPE
48	240789	1	• Camshaft		
49	240426	1	• Bearing		
50	240427	2	• Screw		
51	941906	2	• Spring washer		
52	240023	1	• Roller bearing		
53	240022	1	• Sealing ring		
54	243299	1	• O-ring		
55	240024	X	• Adjusting washer		TH = 0.10 MM
	240025	X	• Adjusting washer		TH = 0.12 MM
	240026	X	• Adjusting washer		TH = 0.14 MM
	240027	X	• Adjusting washer		TH = 0.16 MM
	240028	X	• Adjusting washer		TH = 0.18 MM
	240029	X	• Adjusting washer		TH = 0.30 MM
	240030	X	• Adjusting washer		TH = 0.50 MM
56	240021	1	• Cover		
57	956094	4	• Screw		
58	941906	4	• Spring washer		
59	955806	1	• Nut		
60	941913	1	• Spring washer		
61	35168	1	• Key		
62	240023	1	• Roller bearing		
63	240032	1	• Ring		
64	240033	X	• Adjusting washer		TH = 1.2 MM
	240034	X	• Adjusting washer		TH = 1.5 MM
	240035	X	• Adjusting washer		TH = 1.8 MM
	240036	X	• Adjusting washer		TH = 2.0 MM
65	240947	1	• Cover		
66	240948	1	• Gasket		
67	956205	12	• Screw		
68	239896	1	• Gasket		
69	130673	3	• Stud		
70	955781	3	• Nut		
71	941906	3	• Spring washer		
72	241647	1	• Setting indicator		
73	955268	2	• Screw		
74	941906	2	• Spring washer		
75	870911	1	• Plug	02C-0700	