



6119

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	4717689	1	Differential carrier	RATIO 6,14/1
2	1522958	1	· Housing	
3		2	· · CAP	
4	104109	4	· · · Screw	
5	120173	4	· · · Washer	
6	310719	4	· · · Bushing	
7		1	· DIFFERENTIAL	
8	1522477	1	· · Gear set, CROWN WHEEL WITH PINION	RATIO 6,14/1
9	191394	16	· · · Screw	
10	191055	16	· · · Castle nut	
11	907849	16	· · · Cotter pin	
12	311760	1	· · · Spider	
13	273431	1	· · · Drive gear set	
14		4	· · · · SIDE PINION	IK
15	120226	4	· · · · Thrust washer	IK
16		2	· · · · SIDE GEAR	IK
17	120228	2	· · · · Thrust washer	IK
18	1522289	1	· · · Housing	LEFT
19	1522133	1	· · · Housing	RIGHT
20	948710	16	· · · Screw	
21	383992	1	· Lock washer	ALT
	382779	1	· Lock washer	ALT
22	914480	1	· Snap ring	
23	184113	1	· Roller bearing	
24	1522173	1	· Bearing housing	
25	184634	1	· · · Bearing, CUP	(384272)
26	384477	1	· · · Oil plate	
27	184633	1	· · · Bearing, CUP	(384270)
28	184634	1	· Bearing, CONE	(384273)
29	384612	X	· Spacer sleeve	TH = 5.54 ALT
	384613	X	· Spacer sleeve	TH = 5.56 ALT
	384614	X	· Spacer sleeve	TH = 5.62 ALT
	384615	X	· Spacer sleeve	TH = 5.68 ALT
	384616	X	· Spacer sleeve	TH = 5.74 ALT
	384617	X	· Spacer sleeve	TH = 5.76 ALT
30	184633	1	· Bearing, CONE	(384271)
31	1522895	1	· Seal	
32	943142	1	· Sealing ring	
33	384068	X	· Adjusting washer	TH = 0.10 MM
	384604	X	· Adjusting washer	TH = 0.15 MM
	384070	X	· Adjusting washer	TH = 0.35 MM
	384072	X	· Adjusting washer	TH = 1.00 MM
34	955577	6	· Screw	
35	941911	6	· Spring washer	
36	382990	1	· Companion flange	TYP = 1700 MM
37	382015	1	· · Dust cover	
38	943805	1	· Nut	
39	941700	1	· Washer	
40	181298	2	· Roller bearing, CONE	
41	181128	2	· Cup, CUP	
42	384044	1	· Adjusting device	LEFT
	1522136	1	· Nut	RIGHT
43	1522426	2	· Lock washer	
44	955294	4	· Screw	
45	941907	4	· Spring washer	