



6074

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	827349	1	Alternator		28V 25A
2		1	EXTRA ALTERNATOR AND INSTALLATION COMPONENTS	030-0500 030-0400	
3		1	CHARGING RELAY INSTALLATION COMPONENTS	030-0200	
4	955701	1	Screw		L = 89 MM, EARLY TYPE
	955699	1	Screw		L = 76 MM, LATE TYPE
	941909	1	Spring washer		LATE TYPE
5	950385	1	Nut		EARLY TYPE
6	823107	1	Tensioner		
7	940186	1	Screw		
8	191172	1	Washer		
9	950353	1	Lock nut		
10	947951	1	V-belt		
11	843248	1	Pulley		
12	827150	1	Temperature sensor		
13	11996	1	Gasket	IK	
14	881432	1	Pressure sensor		
15	870998	1	Starter motor		24V
				030-0600	
16	953486	3	Stud		
17	955827	3	Nut		
18	942336	3	Spring washer		
19	822858	1	Thermo monitor		93%Z9C. POUR SECTION CABLE 0,5-1,5 MILLIM% <sup>2</sup> TRE-CARR% <sup>E</sup> 1
	822859	1	Thermo monitor		86%Z9C
20	843812	1	Switch		POUR SECTION CABLE 0,5-1,5 MILLIM% <sup>2</sup> TRE-CARR% <sup>E</sup> 1
21	942490	1	T-nipple		POUR SECTION CABLE 0,5-1,5 MILLIM% <sup>2</sup> TRE-CARR% <sup>E</sup> 1
22	850420	1	Horn		
23	955827	1	Nut		
24	955535	1	Screw		
25	942336	1	Spring washer		
26	820553	1			MECHANICAL
	820554	1	Hour counter		MECHANICAL
	820555	1	Hour counter		MECHANICAL
	820556	1	Hour counter		MECHANICAL
27	325842	1	Nut		
28	1507899	1	Tachometer sensor		FOR CABLE AREA 0,75-2,0 SQMM.
29		1	INSTRUMENT PANEL AND INSTALLATION COMPONENTS	030-0750	
30		1	CONNECTING BOX AND FUSE BOX	030-0250	
31		1	STOP SOLENOID AND INSTALLATION COMPONENTS		SEE GROUP 2D
32	836197	1	Cable trunk CABLES AND TERMINALS	030-0900	
33	827353	X	Clamping ring	030-0900	
34	942400	1	Clamp		
35	823416	1	Pressure monitor		
36	823417	1	Hollow screw		
37	957178	2	Gasket	IK	
38	352390	1	Level indicator		
39	11994	1	Gasket		
40	1501203	1	Level relay		
41	11411	1	Ground cable		
42	870451	1	Relay		
43	950019	2	Screw		
44	941905	2	Spring washer		

