



4456

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	243625	1			
2	243773	1		02C-1000	
4	240072	1			REPL BY 243083
				02C-1400	
	243083	1	· Feed pump		
				02C-1400	
5	239896	1	· Gasket		
6	130673	3	· Stud		
7	955781	3	· Nut		
8	941906	3	· Spring washer		
9		1	· PUMP HOUSING		
10	239982	6	· Tappet		
11	240779	6	· · Bolt		
12	240780	6	· · Bushing		
13	240781	6	· · Roller		
14	238379	6	· · Plate		
15	239986	6	· Spring disc		
16	244065	6	· Spring		(239985) REPL BY 244065
	244065	6	· Spring		
17	239984	6	· Spring disc		
18	240782	6	· Control sleeve		
19	239991	6	· Cover		
20	241677	6	· Washer		
21	239990	6	· Lock ring		
22	240002	6	· O-ring		
23	240003	6	· Spacer ring		
24	240424	X	· Gasket		TH = 0.15 MM
	240004	X	· Gasket		TH = 0.40 MM
	240005	X	· Gasket		TH = 0.50 MM
	240006	X	· Gasket		TH = 0.60 MM
	240007	X	· Gasket		TH = 0.70 MM
	240008	X	· Gasket		TH = 0.80 MM
25	243741	6	· Bushing		
26	239989	6	· O-ring		
27	240422	6	· O-ring		
28	239988	6	· Pump element		
29	240783	6	· Delivery valve		
30	239993	6	· Gasket		
31	238309	6	· Spring		
32	240001	6	· Gasket		
33	243771	6	· Delivery valve retai		
34	243743	12	· Washer		
35	240010	12	· Screw		
36	955783	12	· Nut		
37	941908	12	· Spring washer		
38		1	· COVER		
39	956209	2	· Screw		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
40	18891	2	• Lock washer		
41	240907	1	• Control rod		
42	240014	2	• Guide sleeve		
43	244008	1	• Lock pin		(131015)
44	240015	1	• Bushing		
45	238663	6	• Plug		
46	238312	X	• Adjusting washer		TH = 0.3 MM
	241734	X	• Adjusting washer		TH = 0.5 MM
	238314	X	• Adjusting washer		TH = 1.0 MM
47	870911	1	• Plug		INCLUDED IN CENTRIFUGAL GOVERNOR.
48	240017	1	• Gasket		INCLUDED IN CENTRIFUGAL GOVERNOR.
49	240429	6	• Plug		
50	243263	1	• Plug		
51	240017	1	• Gasket		
52	240789	1	• Camshaft		
53	240426	1	• Bearing		
54	240427	2	• Screw		
55	941906	2	• Spring washer		
56	240023	1	• Roller bearing		
57	240022	1	• Sealing ring		
58	243299	1	• O-ring		
59	240024	X	• Adjusting washer		TH = 0.10 MM
	240025	X	• Adjusting washer		TH = 0.12 MM
	240026	X	• Adjusting washer		TH = 0.14 MM
	240027	X	• Adjusting washer		TH = 0.16 MM
	240028	X	• Adjusting washer		TH = 0.18 MM
	240029	X	• Adjusting washer		TH = 0.30 MM
	240030	X	• Adjusting washer		TH = 0.50 MM
60	240021	1	• Cover		
61	956094	4	• Screw		
62	941906	4	• Spring washer		
63	955806	1	• Nut		
64	941913	1	• Spring washer		
65	35168	1	• Key		
66	240023	1	• Roller bearing		
67	240032	1	• Ring		
68	240033	X	• Adjusting washer		TH = 1.2 MM
	240034	X	• Adjusting washer		TH = 1.5 MM
	240035	X	• Adjusting washer		TH = 1.8 MM
	240036	X	• Adjusting washer		TH = 2.0 MM
69	240947	1	• Cover		
70	240948	1	• Gasket		
71	956205	12	• Screw		
72	241647	1	• Setting indicator		
73	100101	2	• Screw		
74	941906	2	• Spring washer		