



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	STARTER	030-1045	
2		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW RIGHT	030-0695	
		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW LEFT	030-0690	
		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW LEFT	030-0693	ALT.45A
		1	ALTERNATOR TWIN MOUNTING INSTALLATION COMPONENTS	030-0697	
		1	ALTERNATOR AND INSTALLATION COMPONENTS HIGH RIGHT	030-0698	
3		1	STARTER RELAY AND INSTALLATION COMPONENTS	030-1210	*
4		1	STOP SOLENOID AND INSTALLATION COMPONENTS		SEE GROUP 2D
5	354671	1	Tachometer sensor		
6	925059	1	O-ring		
7	843325	1	Temperature sensor		
8	822858	1	Thermo monitor		
9	947624	2	Gasket		
10	834391	1	Nipple		
11	180759	1	Plug		
12	835980	1	Nipple		
13	843231	1	Oil pressure sensor		
14	864284	1	Pressure monitor		(848367)
15		1	STARTING HEATER INSTALLATION COMPONENTS		SEE GROUP 2B
16		1	INSTRUMENT PANEL AND INSTALLATION COMPONENTS	030-1462	
17		1	ELECTRICAL BOX AND INSTALLATION COMPONENTS	030-0200	
18	847515	1	Cable trunk		SPEC.867774. CABLE UNIT ENGINE.
	847039	1	Cable trunk		STD. CABLE UNIT ENGINE.
18	846694	1	Cable trunk		SPLIT END. TO INSTRUMENT PANEL.
19		X	CABLES AND TERMINALS	030-1500	
20	846648	1	Extension cable		L = 3000 MM
	846649	1	Extension cable		L = 5000 MM
	846650	1	Extension cable		L = 7000 MM
21		X	EXTRA EL.EQUIPMENT	030-1490	