

TD100G-87

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	863451	1	Injection pump		
	3803700	1	Injection pump, exch		Exchange unit
2		1	PUMP COUPLING	02C-0510	
3	478647	1	Bracket		(468558)
4	955566	4	Screw		
5	940280	4	Spring washer		
6	423161	2	Guide sleeve		
7	940156	4	Screw		
8	190509	4	Washer		
9	417588	1	Guide sleeve		
10	477173	1	Pressure equalizer		
11	969011	1	Gasket		
12	1545853	1	Tube		
12A	18368	1	Clamp		
12B	192292	1	Washer		
12C	950020	1	Screw		
13	969299	1	Hollow screw		
14	11994	2	Gasket		
15	954386	1	Fitting		
16	954365	1	Fitting		
17	954357	1	Cap nut		
18	239056	1	Spring		NOT FOR ENGINE WITH STOP SOLENOID.
19	239059	1	Cover		NOT FOR ENGINE WITH STOP SOLENOID.
20	120265	1	Washer		
21	848677	1	Lever		SEE GROUP 2D
22	941906	1	Spring washer		
23	955637	1	Screw		
24	422245	1	Pressure oil line		
25	48634	1	Hollow screw		
26	947281	2	Gasket		
27	942081	1	Hollow screw		
28	18666	1	Gasket		
29	11994	1	Gasket		
30	422246	1	Pipe		
31	25167	1	Hollow screw		
32	969011	2	Gasket		
33	942007	1	Hollow screw		
34	11998	1	Gasket		
35	942703	1	Gasket		
36	845938	1	Fuel pipe		
37	35096	1	Overflow valve		
38	15304	1	Gasket		
39	16496	1	Hollow screw		
40	969011	2	Gasket		
41	846637	1	Leak-off line		
42	74033	1	Hollow screw		
43	947620	2	Gasket		
44	845937	1	Fuel pipe		
45	25167	1	Hollow screw		
46	969011	2	Gasket		
47	404279	2	Clamp		
48	950047	1	Screw		
49	955825	1	Nut		
50	821625	1	Anchorage		
51	404279	1	Clamp		
52	950047	1	Screw		
53	955825	1	Nut		
53A	955893	1	Washer		

TD100G-87

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
54	845450	2	Fuel hose		
55	956983	4	• Nut		
56	956969	4	• Ferrule		
57	471172	1	Filter housing		
				02C-1525	
58	466987	2	Fuel filter		
59	960630	3	Plug		
60	969011	3	Gasket		
61	848931	1	Fuel pipe		
62	25167	1	Hollow screw		
63	969011	2	Gasket		
64	25167	1	Hollow screw		
65	969011	2	Gasket		
66	404279	4	Clamp		
67	950047	2	Screw		
68	955825	2	Nut		
69	848932	1	Fuel pipe		
70	25167	1	Hollow screw		
71	969011	2	Gasket		
72	25167	1	Hollow screw		
73	969011	2	Gasket		
74	940162	2	Screw		
75	942336	2	Spring washer		
76	960142	2	Washer		
77	424530	6	Injector		
	3803243	6	Injector, exch		Exchange unit
				02C-1435	
78	947620	3	Gasket		
79	469455	6	Sealing ring		
80	469797	6	Yoke		
81	971095	6	Nut		
82	1545022	6	Stud		
83	956980	1	Nut		
84	956966	1	Ferrule		
85	18387	1	Clamp		
86	941906	1	Spring washer		
87	950046	1	Screw		
88	965535	3	Bracket		
89	121563	3	Clamp		
90	955893	3	Washer		
91	941906	3	Spring washer		
92	950046	3	Screw		
92A	955825	3	Nut		
93	1545081	1	Leak-off line		
94	74033	6	Hollow screw		INCLUDED IN FUEL INJECTOR.
95	946729	12	Gasket		INCLUDED IN FUEL INJECTOR.
96	1545091	1	Delivery pipe		CYL.1
97	1545092	1	Delivery pipe		CYL.2
98	1545093	1	Delivery pipe		CYL.3
99	1545094	1	Delivery pipe		CYL.4
100	1545095	1	Delivery pipe		CYL.5
101	1545096	1	Delivery pipe		CYL.6
102	470181	5	Clamp		2-PIPE
	470182	3	Clamp		3-PIPE