



6119

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	1522981	1	Differential carrier	RATIO 5,43/1
2	1522958	1	• Housing	
3		2	• • CAP	
4	104109	4	• • Screw	
5	120173	4	• • Washer	
6	310719	4	• • Bushing	
7		1	• DIFFERENTIAL	
8	1522478	1	• • Gear set, CROWN WHEEL WITH PINION	RATIO 5,43/1
9	191394	16	• • Screw	
10	191055	16	• • Castle nut	
11	907849	16	• • Cotter pin	
12	311760	1	• • Spider	
13	273431	1	• • Drive gear set	
14		4	• • • SIDE PINION	IK
15	120226	4	• • • Thrust washer	IK
16		2	• • • SIDE GEAR	IK
17	120228	2	• • • Thrust washer	IK
18	1522289	1	• • Housing	LEFT
19	1522133	1	• • Housing	RIGHT
20	948710	16	• • Screw	
21	383992	1	• Lock washer	ALT
	382779	1	• Lock washer	ALT
22	914480	1	• Snap ring	
23	184113	1	• Roller bearing	
24	384045	1	• Sleeve	
25	184634	1	• • Bearing, CUP	(384272)
26	384477	1	• • Oil plate	
27	184633	1	• • Bearing, CUP	(384270)
28	184634	1	• Bearing, CONE	(384273)
29	384612	X	• Spacer sleeve	TH = 5,54 ALT
	384613	X	• Spacer sleeve	TH = 5,56 ALT
	384614	X	• Spacer sleeve	TH = 5,62 ALT
	384615	X	• Spacer sleeve	TH = 5,68 ALT
	384616	X	• Spacer sleeve	TH = 5,74 ALT
	384617	X	• Spacer sleeve	TH = 5,76 ALT
30	184633	1	• Bearing, CONE	(384271)
31	1522895	1	• Seal	
32	943142	1	• Sealing ring	
33	384068	X	• Adjusting washer	TH = 0.10 MM
	384604	X	• Adjusting washer	TH = 0.15 MM
	384070	X	• Adjusting washer	TH = 0.35 MM
	384072	X	• Adjusting washer	TH = 1.00 MM
34	955577	6	• Screw	
35	941911	6	• Spring washer	
36	382992	1	• Companion flange	TYP = 1600 MM
37	382015	1	• • Dust cover	
38	943805	1	• Nut	
39	941700	1	• Washer	
40	181298	2	• Roller bearing, CONE	
41	181128	2	• Cup, CUP	
42	384044	1	• Adjusting device	LEFT
	1522136	1	• Nut	RIGHT
43	1522426	2	• Lock washer	

