



6851

## TD120H PP

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	847308	1	Starter motor COMPONENTS NOT SPEC.		24V
2	953486	3	Stud		
3	942336	3	Spring washer		
4	955827	3	Nut		
5		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW LEFT	030-0920	
		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW RIGHT	030-0930	
		1	DOUBLE MOUNTED	030-0940	
6	823416	1	Pressure monitor		
7	823417	1	Hollow screw		
8	957178	2	Gasket		
9	850420	1	Horn		
10	955536	1	Screw		
11	942336	1	Spring washer		
12	843028	1	Spacer sleeve		
13		1	CABLE UNIT		
14		X	· CABLES AND TERMINALS	030-1500	
15	948210	X	Strip clamp		
16		X	· CABLE IRON		
17	11411	1	Ground cable		ÅKERMAN
18	354671	1	Tachometer sensor		
	846695	1	Tachometer sensor		IS USED WHEN ONE OR MORE TACHOMETER SENDER IS CONNECTED
19	925059	1	O-ring		
20	827150	1	Temperature sensor		
	822858	1	Thermo monitor		TEMPERATURE GUARD - AUTOMATIC SUPERVISION TEMPERATURE SENDER 827150
21	11996	1	Gasket		
22	834391	1	Nipple		
23	180759	2	Plug		ALT
24	843231	1	Oil pressure sensor		
25	843812	1	Switch		
26		1	BATTERY BOX AND INSTALLATION COMPONENTS	030-1475	
27		1	INSTRUMENT PANEL AND INSTALLATION COMPONENTS	030-1470	
28		1	INSTRUMENT PANEL AND INSTRUMENTS	030-1473	
29	823409	1	Tachometer		
	828600	1	Tachometer		
30	828558	1	Attaching ring		FOR 828600
31	828613	1	Thermometer		
32	828615	1	Hour counter		
33	828619	1	Oil pressure gauge		
34		1	ELECTRICAL BOX AND INSTALLATION COMPONENTS	030-0347	
35	847051	1	Cable trunk		ENGINE WITH SINGLE ALTERNATOR
	847051	2	Cable trunk		ENGINE WITH DOUBBLE ALTERNATORS
	847100	1	Cable trunk		ENGINE WITH STARTING ELEMENT
	847074	1	Cable trunk		STARTER - ALARM SYSTEM - STOP SOLENOID
	847050	1	Cable trunk		STARTER

## TD120H PP

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
36	846648	1	Extension cable		L = 3000 MM
	846649	1	Extension cable		L = 5000 MM
	846650	1	Extension cable		L = 7000 MM
	846694	1	Cable trunk		L = 2000 MM. IS USED WHEN INSTRUMENT PANEL NOT PRODUCED BY VOLVO PENTA IS INSTALLED
37	828582	1	Starter switch		
38	828676	2	· Key		STATE KEY CODE WHEN ORDERING
39	1581232	1	Level indicator		
40	11994	1	Gasket		
41	1501618	1	Relay		24V
42	847409	1	Bracket		
43	846728	1	Brace		
44	955120	3	Screw		
45		1	STARTING ELEMENT AND INST. COMPONENTS	030-1290	