



6798

TD120H PP

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	470343	1	Oil pump		
				02A-1550	
2	190529	2	Lock washer		
3	955538	4	Screw		
4	470383	2	Sealing ring		
5	955533	2	Screw		
6	941907	2	Spring washer		
7	470379	1	Strainer		
8	470385	1	Bracket		
9	942402	2	Flange screw		
10	470375	1	Pipe		
11	466908	1	Fitting		
12	470376	1	Intermediate section		
13	470263	1	Sealing ring		
14	959794	2	Screw		
15	941907	2	Spring washer		
16	470377	1	Fitting		
17	956973	1	Ferrule		
18	470378	1	Bracket		
19	942402	2	Flange screw		
20	949786	1	Clamp		
21	942402	1	Flange screw		
22	955894	1	Washer		
23	945467	1	Nut		
24	412845	1	Extension		
25	944663	1	Oil dipstick		
26	470160	1	Oil pan		
27	192538	1	Magnetic plug		
28	18677	1	Gasket		
29	470133	1	Gasket		
30	942402	41	Flange screw		
31	468653	1	Bracket		
32	955525	2	Screw		
33	941907	2	Spring washer		
34	960141	2	Washer		
35		1	OIL SUMP PUMP AND INSTALLATION COMPONENTS	02A-1645	
		1	ELECTRICAL OIL SUMP PUMP AND INSTALLATION COMPONENTS	02A-1650	
36	468649	1	Housing		SEE GROUP 2B
				02A-1350	
37	466623	2	Nipple		
38	466634	2	Oil filter		
39	949659	1	O-ring		
40	469486	1	Gasket		
41	955525	2	Screw		L = 25 MM
42	942529	2	Screw		L = 108 MM
43	940115	2	Screw		L = 25 MM
44	942336	4	Spring washer		
45	424342	1	Sealing ring		
46	469468	1	Valve seat		
47	471085	1	Valve		
48	470291	1	Spring		
49	468727	1	Spring		
50	949658	1	O-ring		
51	469465	1	Cover		
52	192287	2	Washer		
53	955512	2	Screw		