



6995

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	847612	1	Injection pump		
	3803686	1	Injection pump, exch		Exchange unit
2	845214	1	• Centrifugal governor		
				02C-0935	
3	244391	1	• Feed pump		
				02C-1200	
4	239896	1	• Gasket	IK	
5	130673	3	• Stud		
6	941906	3	• Spring washer	IK	
7	940197	3	• Nut		
8		1	• HOUSING		
9	844988	1	• • Plug		
10	240023	1	• Roller bearing		
11	240032	1	• Ring		
12	240033	X	• Adjusting washer		TH = 1.2 MM
	240034	X	• Adjusting washer		TH = 1.5 MM
	240035	X	• Adjusting washer		TH = 1.8 MM
	240036	X	• Adjusting washer		TH = 2.0 MM
13	240947	1	• Cover		
14	240948	1	• Gasket	IK	
15	244732	12	• Screw		
16	243263	1	• Plug		
17	240017	1	• Gasket	IK	
18	180707	6	• Plug		
19	18836	6	• Gasket	IK	
20	244699	1	• Bushing		
21	240014	2	• Guide sleeve		
22	244008	1	• Lock pin		
23	240907	1	• Control rod		
24	6642955	1	• Screw		
25	947620	1	• Gasket		
26	241647	1	• Setting indicator		
27	956092	2	• Screw		
28	941906	2	• Spring washer		
29	845454	1	• Camshaft		
30	244406	1	• Bearing		
31	240427	2	• Screw		
32	941906	2	• Spring washer	IK	
33	35168	1	• Key	IK	
34	240023	1	• Roller bearing		
35	240022	1	• Sealing ring	IK	
36	243299	1	• O-ring	IK	
37	240024	X	• Adjusting washer		TH = 0.10 MM
	240025	X	• Adjusting washer		TH = 0.12 MM
	240026	X	• Adjusting washer		TH = 0.14 MM
	240027	X	• Adjusting washer		TH = 0.16 MM
	240028	X	• Adjusting washer		TH = 0.18 MM
	240029	X	• Adjusting washer		TH = 0.30 MM
	240030	X	• Adjusting washer		TH = 0.50 MM
38	240021	1	• Cover		
39	243714	4			
40	941906	4	• Spring washer	IK	
41	955806	1	• Nut		
42	941913	1	• Spring washer	IK	
43	244380	12	• Stud		
44	943927	12	• Nut		
45	941908	12	• Spring washer		
46	244404	6	• Push rod		
47	240779	6	• • Bolt		
48	240780	6	• • Bushing		
49	846577	6	• • Bearing		
50	238379	6	• • Plate		
51	244685	6	• Spring disc		
52	244731	6	• Spring		

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
53	239984	6	· Spring disc		
54	240782	6	· Control sleeve		
55	243668	6	· Lock ring	IK	
56	239991	6	· Cover		
57	846937	6	· O-ring		
58	241677	6	· Washer	IK	
59	844990	X	· Adjusting washer		TH = 0.40 MM
	847428	X	· Adjusting washer		TH = 0.45 MM
	844991	X	· Adjusting washer		TH = 0.50 MM
	847429	X	· Adjusting washer		TH = 0.60 MM
	844992	X	· Adjusting washer		TH = 0.70 MM
	844993	X	· Adjusting washer		TH = 0.80 MM
	847430	X	· Adjusting washer		TH = 0.85 MM
	845238	X	· Adjusting washer		TH = 0.90 MM
	844994	X	· Adjusting washer		TH = 1.00 MM
	844995	X	· Adjusting washer		TH = 1.10 MM
	244633	X	· Adjusting washer		TH = 1.20 MM
	844996	X	· Adjusting washer		TH = 1.25 MM
	244634	X	· Adjusting washer		TH = 1.30 MM
	847431	X	· Adjusting washer		TH = 1.35 MM
	244635	X	· Adjusting washer		TH = 1.40 MM
	847432	X	· Adjusting washer		TH = 1.45 MM
	244381	X	· Adjusting washer		TH = 1.50 MM
	244382	X	· Adjusting washer		TH = 1.60 MM
	244383	X	· Adjusting washer		TH = 1.70 MM
	244384	X	· Adjusting washer		TH = 1.80 MM
	244385	X	· Adjusting washer		TH = 1.90 MM
	244386	X	· Adjusting washer		TH = 2.00 MM
	847433	X	· Adjusting washer		TH = 2.10 MM
60	244733	6	· Sleeve		
61	240422	12	· O-ring	IK	
62	244401	6	· Pump element		
63	240783	6	· Delivery valve		
64	239993	6	· Gasket	IK	
65	240969	6	· Spring		
66	240972	X	· Washer		TH = 0.2 MM
	240973	X	· Washer		TH = 0.5 MM
67	240971	6	· Plug		
68	240001	6	· Gasket	IK	
69	244636	6	· Delivery valve retai		
70	243743	12	· Washer		
	845240	1	· Small parts kit		SEE GROUP 10A