



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1		1	STARTER	030-1050	
2		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW LEFT	030-0905	
		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW LEFT	030-0925	ALT.45A
		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW RIGHT	030-0930	
		1	TWIN MOUNTING	030-0940	
3		1	STARTER RELAY AND INSTALLATION COMPONENTS	030-1230	
4		1	STOP SOLENOID AND INSTALLATION COMPONENTS		SEE GROUP 2D
5	846695	1	Tachometer sensor		
6	925059	1	O-ring		
7	827150	1	Temperature sensor		
8	822858	1	Thermo monitor		
9	11996	1	Gasket		
9A	947624	1	Gasket		
10	834391	1	Nipple		
11	180759	1	Plug		
12	843231	1	Oil pressure sensor		
13	864284	1	Pressure monitor		(848367)
14		1	STARTING HEATER AND INSTALLATION COMPONENTS		SEE GROUP 2B
15		1	INSTRUMENT PANEL AND INSTALLATION COMPONENTS	030-1462	
16		1	ELECTRICAL BOX AND INSTALLATION COMPONENTS	030-0210	
17	847515	1	Cable trunk		SPEC.867842. CABLE UNIT ENGINE.
	847450	1	Cable trunk		STD. CABLE UNIT ENGINE.
17	846694	1	Cable trunk		SPLIT END. TO INSTRUMENT PANEL.
18	846648	1	Extension cable		L = 3000 MM
	846649	1	Extension cable		L = 5000 MM
	846650	1	Extension cable		L = 7000 MM
19		X	CABLES AND TERMINALS	030-1500	
20		X	EXTRA EL.EQUIPMENT	030-1490	