



REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	845275	1	Injection pump		
	3803762	1	Injection pump, exch		Exchange unit
2	844960	1	• Governor	02C-1100	
3	243083	1	• Feed pump	02C-1320	
4		1	• HOUSING		
5	239982	6	• Tappet		
6	240779	6	• • Bolt		
7	240780	6	• • Bushing		
8	240781	6	• • Roller		
9	238379	6	• • Plate		
10	6211952	6	• Spring disc		(244403) REPL BY 244685
	244685	6	• Spring disc		
11	239985	6			REPL BY 244065
	244065	6	• Spring		
12	239984	6	• Spring disc		
13	240782	6	• Control sleeve		
14	239991	6	• Cover		
15	241677	6	• Washer		
16	239990	6	• Lock ring		
17	240002	6	• O-ring		(844998)
18	243263	1	• Plug		
	240170	1	• Screw		(180736)
19	240017	1	• Gasket		
20	844990	X	• Adjusting washer		TH = 0.4 MM
	844991	X	• Adjusting washer		TH = 0.5 MM
	844992	X	• Adjusting washer		TH = 0.7 MM
	844993	X	• Adjusting washer		TH = 0.8 MM
	844994	X	• Adjusting washer		TH = 1.0 MM
	844995	X	• Adjusting washer		TH = 1.1 MM
	844996	X	• Adjusting washer		TH = 1.25 MM
	244381	X	• Adjusting washer		TH = 1.5 MM
	244382	X	• Adjusting washer		TH = 1.6 MM
	244383	X	• Adjusting washer		TH = 1.7 MM
	244384	X	• Adjusting washer		TH = 1.8 MM
	244385	X	• Adjusting washer		TH = 1.9 MM
	244386	X	• Adjusting washer		TH = 2.0 MM
21	244379	6	• Bushing		
22	240422	12	• O-ring		
23	244470	6	• Pump element		
24	244471	6	• Delivery valve		
25	239993	6	• Gasket		
26	240969	6	• Spring		
27	240001	6	• Gasket		
28	243742	6	• Delivery valve retai		
29	243743	12	• Washer		
30	941908	12	• Spring washer		
31	943927	12	• Nut		
32	244380	12	• Stud		
33	240011	1	• Cover		
34	956209	2	• Screw		
35	18891	2	• Lock washer		
36	240907	1	• Control rod		
37	240014	2	• Guide sleeve		
38	240015	1	• Bushing		
39	244008	1	• Lock pin		
40	240971	6	• Plug		
41	240972	X	• Washer		TH = 0.2 MM

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
41	240973	X	· Washer		TH = 0.5 MM
42	240789	1	· Camshaft		
43	240426	1	· Bearing		
44	240427	2	· Screw		
45	941906	2	· Spring washer	IK	
46	240023	2	· Roller bearing		
47	240022	1	· Sealing ring		
48	243299	1	· O-ring		
49	240024	X	· Adjusting washer		TH = 0.10 MM
	240025	X	· Adjusting washer		TH = 0.12 MM
	240026	X	· Adjusting washer		TH = 0.14 MM
	240027	X	· Adjusting washer		TH = 0.16 MM
	240028	X	· Adjusting washer		TH = 0.18 MM
	240029	X	· Adjusting washer		TH = 0.30 MM
	240030	X	· Adjusting washer		TH = 0.50 MM
50	240021	1	· Cover		
51	956094	4	· Screw		
52	941906	4	· Spring washer	IK	
53	955806	1	· Nut		
54	941913	1	· Spring washer		
55	35168	1	· Key		
56	240032	1	· Ring		
57	240033	X	· Adjusting washer		TH = 1.2 MM
	240034	X	· Adjusting washer		TH = 1.5 MM
	240035	X	· Adjusting washer		TH = 1.8 MM
	240036	X	· Adjusting washer		TH = 2.0 MM
58	240947	X	· Cover		
59	240948	1	· Gasket		
60	956205	12	· Screw		
61	239896	1	· Gasket		
62	130673	3	· Stud		
63	940197	3	· Nut		
64	941906	3	· Spring washer	IK	
65	241647	1	· Setting indicator		
66	956092	2	· Screw		
67	941906	2	· Spring washer		
68	180707	6	· Plug		
69	18836	6	· Gasket		
70	844988	1	· Plug		
71	35096	1	· Overflow valve		
72	238614	1	· Peg		
73	845193	1	· Spring		
74	25540	1	· Bushing		
75	239897	1	· Gasket		