



7796

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	849072	1		
2		1	· HOUSING	
3	239982	6	· Tappet	
4	240779	6	· · Bolt	
5	240780	6	· · Bushing	
6	240781	6	· · Roller	
7	238379	6	· · Plate	
8	244685	6	· Spring disc	
9	244731	6	· Spring	
10	239984	6	· Spring disc	
11	240782	6	· Control sleeve	
12	239991	6	· Cover	
13	241677	6	· Washer	
14	239990	6	· Lock ring	
15	846937	6	· O-ring	
16	243263	1	· Plug	
17	240017	1	· Gasket	
18	844990	X	· Adjusting washer	TH = 0,4 MM
	847428	X	· Adjusting washer	TH = 0,45 MM
	844991	X	· Adjusting washer	TH = 0,5 MM
	847429	X	· Adjusting washer	TH = 0,6 MM
	844992	X	· Adjusting washer	TH = 0,7 MM
	844993	X	· Adjusting washer	TH = 0,8 MM
	847430	X	· Adjusting washer	TH = 0,85 MM
	845238	X	· Adjusting washer	TH = 0,9 MM
	844994	X	· Adjusting washer	TH = 1,0 MM
	844995	X	· Adjusting washer	TH = 1,1 MM
	244633	X	· Adjusting washer	TH = 1,2 MM
	844996	X	· Adjusting washer	TH = 1,25 MM
	244634	X	· Adjusting washer	TH = 1,3 MM
	847431	X	· Adjusting washer	TH = 1,35 MM
	244635	X	· Adjusting washer	TH = 1,4 MM
	847432	X	· Adjusting washer	TH = 1,45 MM
	244381	X	· Adjusting washer	TH = 1,5 MM
	244382	X	· Adjusting washer	TH = 1,6 MM
	244383	X	· Adjusting washer	TH = 1,7 MM
	244384	X	· Adjusting washer	TH = 1,8 MM
	244385	X	· Adjusting washer	TH = 1,9 MM
	244386	X	· Adjusting washer	TH = 2,0 MM
	847433	X	· Adjusting washer	TH = 2,1 MM
19	244379	6	· Bushing	
20	240422	12	· O-ring	
21	244470	6	· Pump element	
22	849033	6	· Delivery valve	
23	239993	6	· Gasket	
24	240969	6	· Spring	
25	240001	6	· Gasket	
26	244636	6	· Delivery valve retai	
27	243743	12	· Washer	
28	941908	12	· Spring washer	
29	943927	12	· Nut	
30	244380	12	· Stud	
31	35096	1	· Overflow valve	
32	238614	1	· · Peg	
33	845193	1	· · Spring	
34	25540	1	· · Bushing	
35	239897	1	· Gasket	
36	240907	1	· Control rod	
37	240014	2	· Guide sleeve	
38	244699	1	· Bushing	
39	244008	1	· Lock pin	
40	239897	1	· Gasket	
41	847439	1	· Screw	
42	240789	1	· Camshaft	

REF	PART NO.	QTY	DESCRIPTION	NOTES
43	240426	1	· Bearing	
44	240427	2	· Screw	
45	941906	2	· Spring washer	
46	240023	2	· Roller bearing	
47	240022	1	· Sealing ring	
48	243299	1	· O-ring	
49	240024	X	· Adjusting washer	TH = 0,1 MM
	240025	X	· Adjusting washer	TH = 0,12 MM
	240026	X	· Adjusting washer	TH = 0,14 MM
	240027	X	· Adjusting washer	TH = 0,16 MM
	240028	X	· Adjusting washer	TH = 0,18 MM
	240029	X	· Adjusting washer	TH = 0,3 MM
	240030	X	· Adjusting washer	TH = 0,5 MM
50	240021	1	· Cover	
51	244823	4	· Screw	
52	941906	4	· Spring washer	
53	955806	1	· Nut	
54	955927	1	· Spring washer	
55	35168	1	· Key	
56	240032	1	· Ring	
57	240033	X	· Adjusting washer	TH = 1,2 MM
	240034	X	· Adjusting washer	TH = 1,5 MM
	240035	X	· Adjusting washer	TH = 1,8 MM
	240036	X	· Adjusting washer	TH = 2,0 MM
58	240947	1	· Cover	
59	240948	1	· Gasket	
60	244732	12	· Screw	
61	239896	1	· Gasket	
62	130673	3	· Stud	
63	940197	3	· Nut	
64	941906	3	· Spring washer	
65	180707	6	· Plug	
66	18836	6	· Gasket	
67	240121	1	· Plug	
68	956092	2	· Screw	
69	941906	2	· Spring washer	
70	241647	1	· Setting indicator	
71	240971	6	· Plug	
	845240	1	· Small parts kit	SEE GROUP 10A