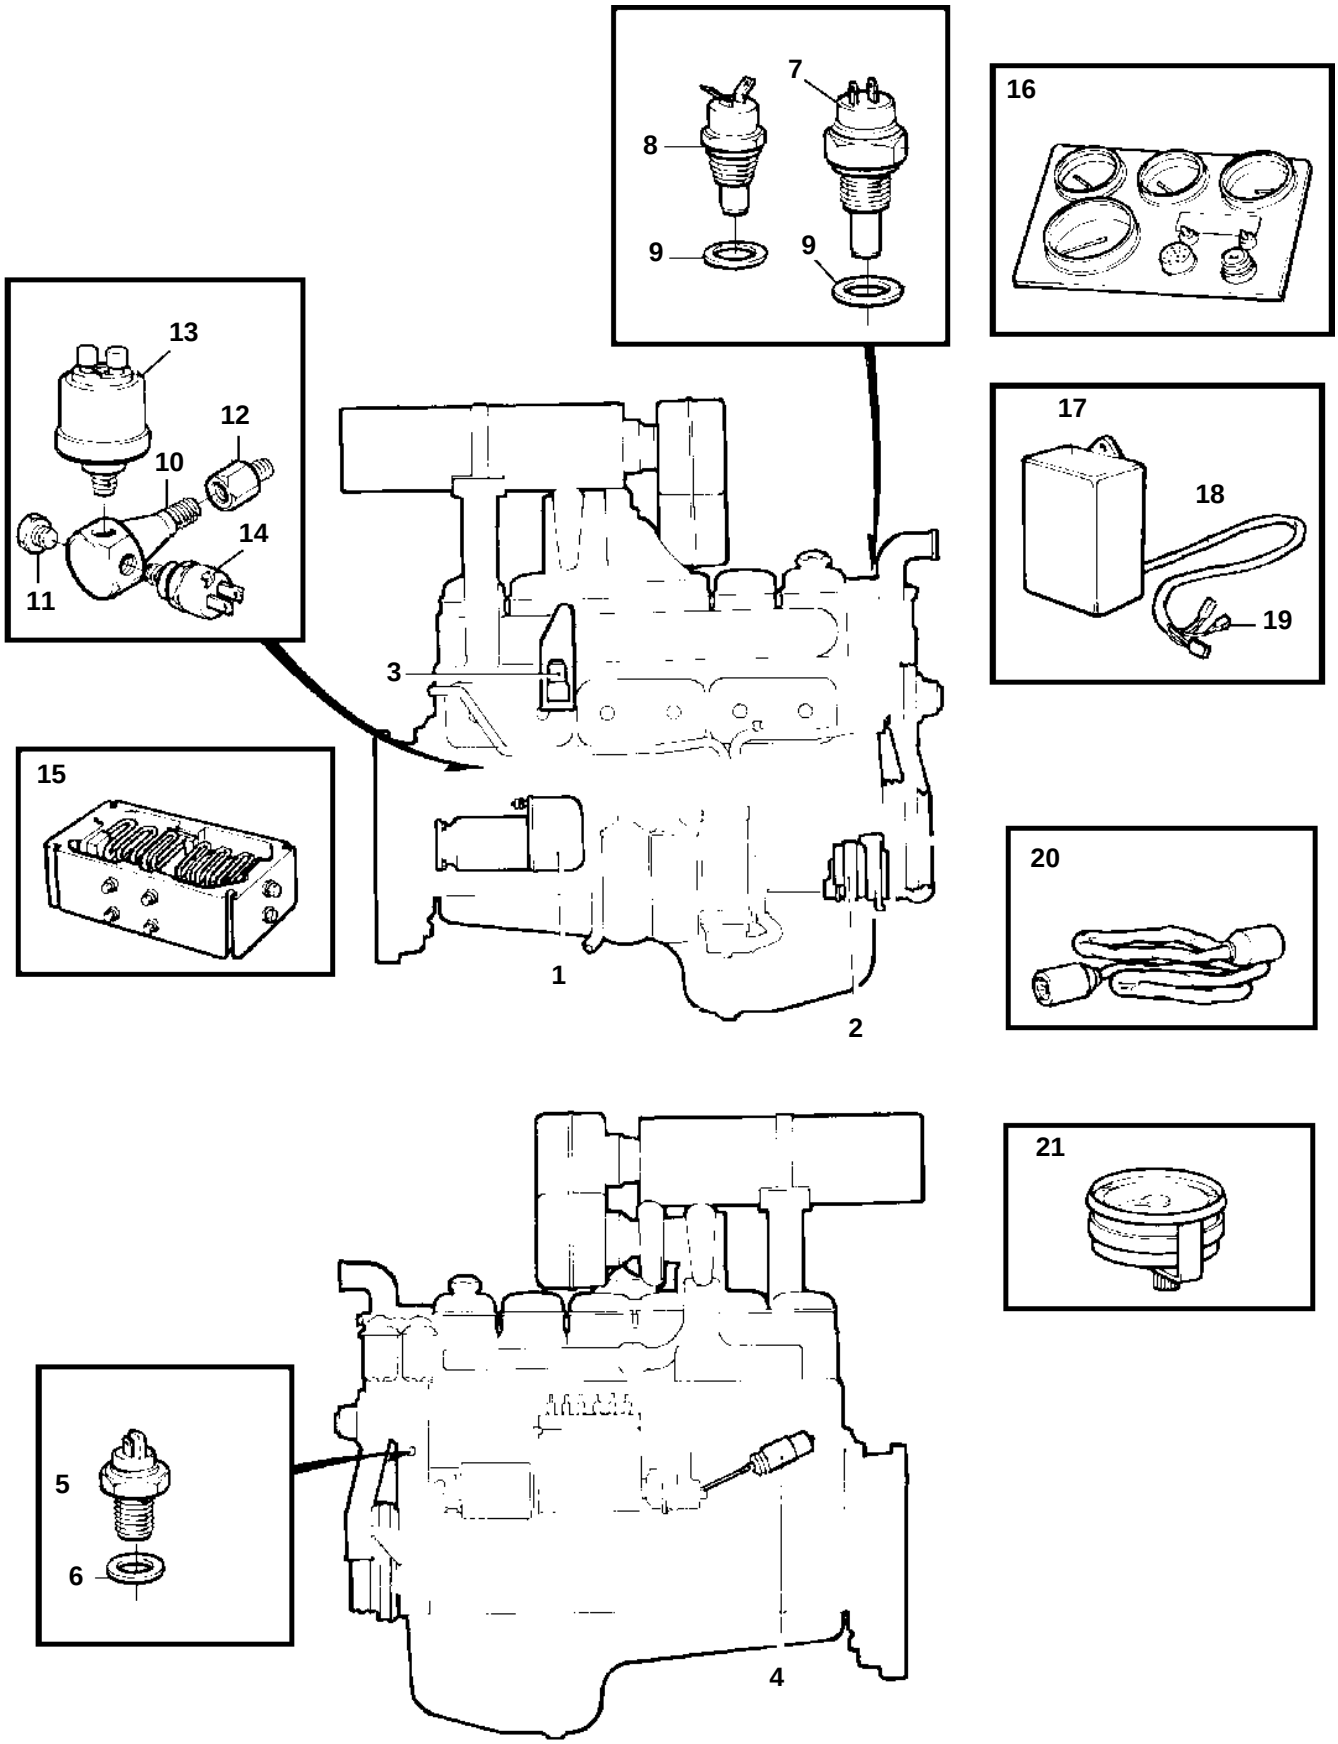
7
8
9
9
16
13
12
10
14
11
17
18
19
3
15
20
1
2
21
5
6
4
9982

REF	PART NO.	QTY	DESCRIPTION		SEE SEC.	NOTES
1		1	STARTER		030-1045	
2		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW RIGHT		030-0695	
3		1	STARTER RELAY AND INSTALLATION COMPONENTS		030-1210	
4		1	STOP SOLENOID AND INSTALLATION COMPONENTS			SEE GROUP 2D
5	354671	1	Tachometer sensor			
6	925059	1	O-ring			
7	843325	1	Temperature sensor			
8	822858	1	Thermo monitor			
9	947624	2	Gasket			
10	834391	1	Nipple			
11	180759	1	Plug			
12	835980	1	Nipple			
13	843231	1	Oil pressure sensor			
14	864284	1	Pressure monitor			(848367)
15		1	STARTING HEATER INSTALLATION COMPONENTS			SEE GROUP 2B
16		1	INSTRUMENT PANEL AND INSTALLATION COMPONENTS		030-1462	
17		1	ELECTRICAL BOX AND INSTALLATION COMPONENTS		030-0200	
18	847039	1	Cable trunk			STD. CABLE UNIT ENGINE.
18	846694	1	Cable trunk			SPLIT END. TO INSTRUMENT PANEL.
19		X	· CABLES AND TERMINALS		030-1500	
20	846648	1	Extension cable			L = 3000 MM
	846649	1	Extension cable			L = 5000 MM
	846650	1	Extension cable			L = 7000 MM
21		X	EXTRA EL.EQUIPMENT		030-1490	