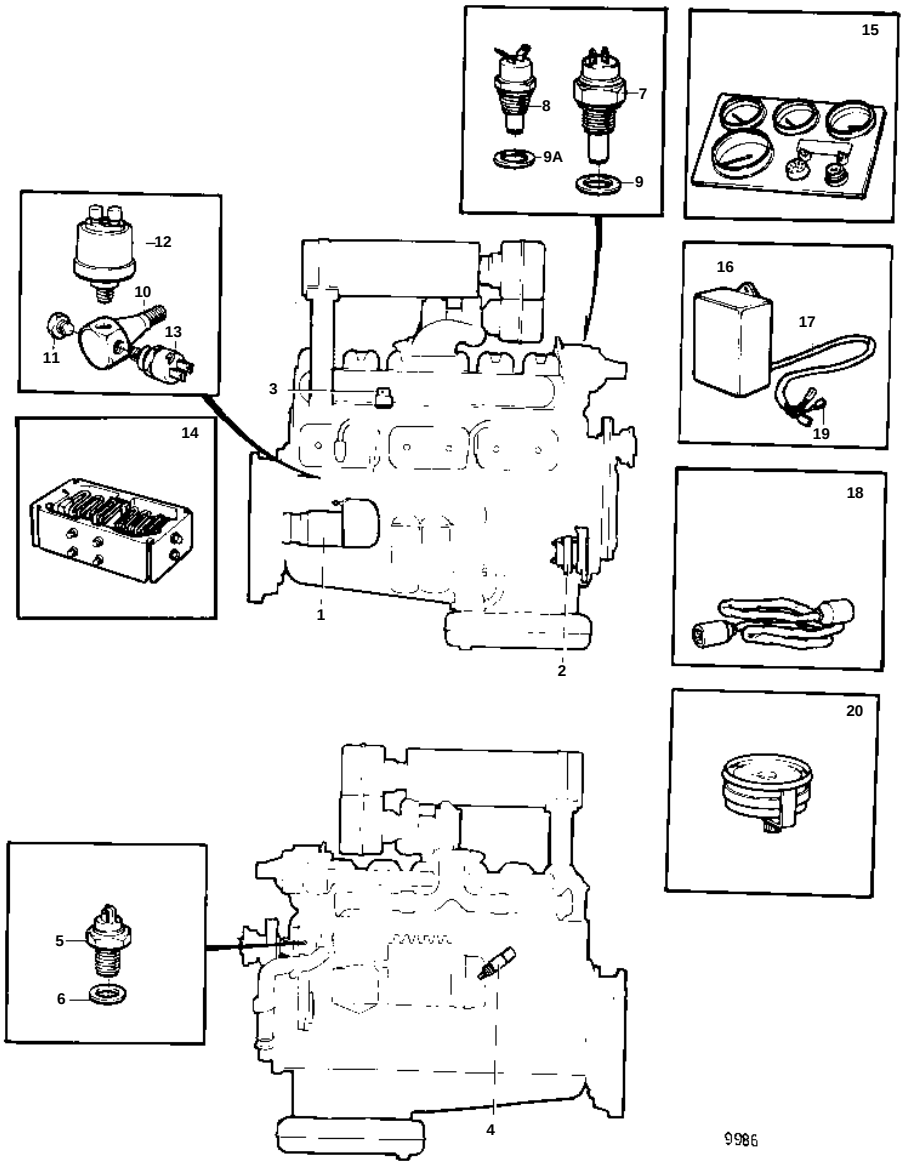
15
8
7
9A
9
12
10
13
11
16
17
19
3
14
18
1
2
20
5
6
4
9986

REF	PART NO.	QTY	DESCRIPTION		SEE SEC.	NOTES
1		1	STARTER		030-1050	
2		1	ALTERNATOR AND INSTALLATION COMPONENTS, LOW RIGHT		030-0930	
3		1	STARTER RELAY AND INSTALLATION COMPONENTS		030-1230	
4		1	STOP SOLENOID AND INSTALLATION COMPONENTS			SEE GROUP 2D
5	846695	1	Tachometer sensor			
6	925059	1	O-ring			
7	827150	1	Temperature sensor			
8	822858	1	Thermo monitor			
9	11996	1	Gasket			
9A	947624	1	Gasket			
10	834391	1	Nipple			
11	180759	1	Plug			
12	843231	1	Oil pressure sensor			
13	864284	1	Pressure monitor			(848367)
14		1	STARTING HEATER AND INSTALLATION COMPONENTS			SEE GROUP 2B
15		1	INSTRUMENT PANEL AND INSTALLATION COMPONENTS		030-1462	
16		1	ELECTRICAL BOX AND INSTALLATION COMPONENTS		030-0210	
17	847450	1	Cable trunk			STD. CABLE UNIT ENGINE.
17	846694	1	Cable trunk			SPLIT END. TO INSTRUMENT PANEL.
18	846648	1	Extension cable			L = 3000 MM
	846649	1	Extension cable			L = 5000 MM
	846650	1	Extension cable			L = 7000 MM
19		X	CABLES AND TERMINALS		030-1500	
20		X	EXTRA EL.EQUIPMENT		030-1490	