


5.0FIPHUBCE, 5.0FIPUCCE, 5.0FIPHUECE, 5.0FIPHURCE, 5.0FIPHUSCE, 5.8FIIHUBCE, 5.8FIIHUECE, 5.8FIPHUBCE, 5.8FIPUCCE, 5.8FIPHUECE, 5.8FIPHURCE, 5.8FIPHUSCE, 5.8FSIPHUBCE, 5.8FSIPUCCE, 5.8FSIPHUECE, 5.8FSIPHURCE, 5.8FSIPHUSCE

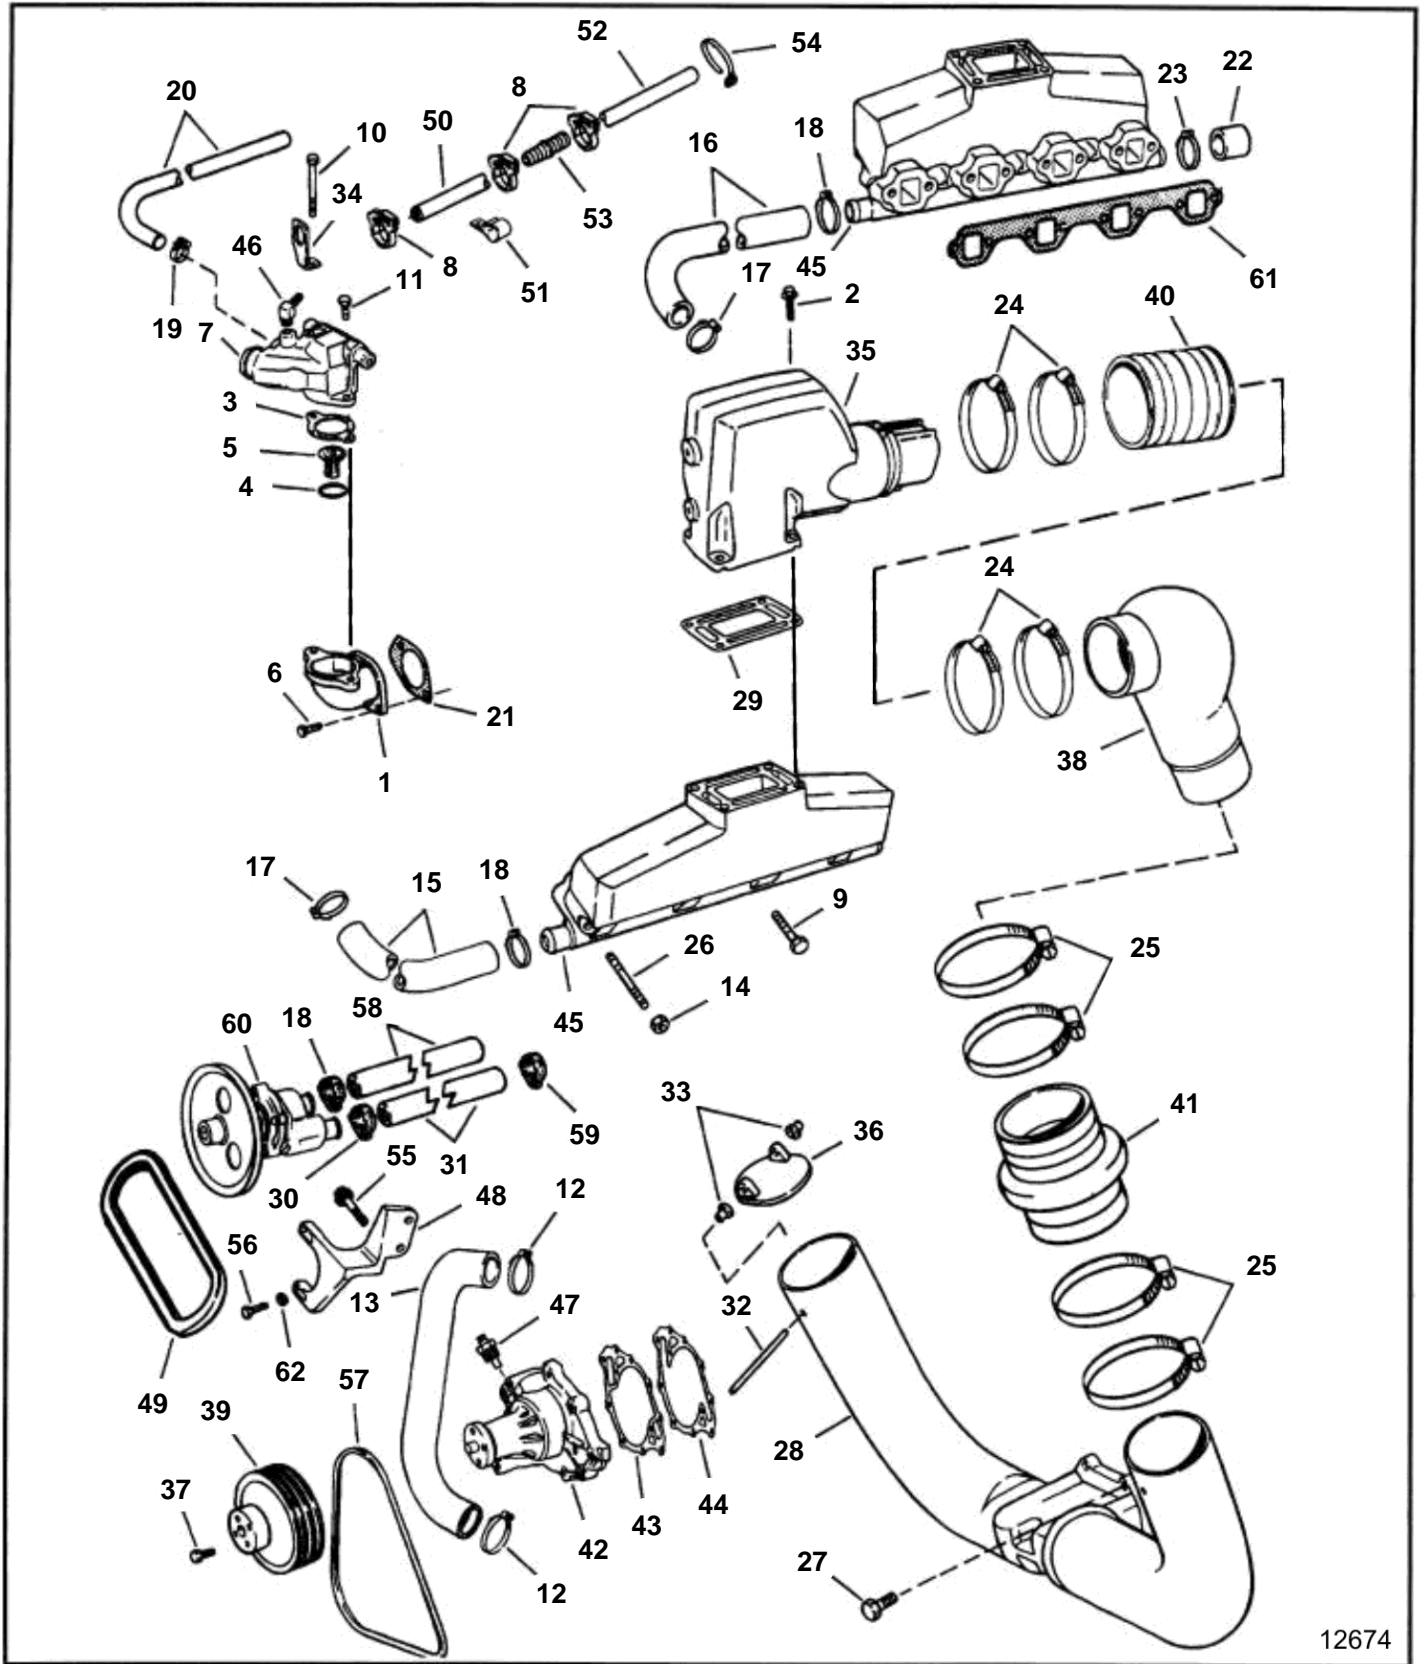

12674

5.0FIPHUBCE, 5.0FIPHUCCE, 5.0FIPHUECE, 5.0FIPHURCE, 5.0FIPHUSCE, 5.8FIIHUBCE, 5.8FIIHUECE, 5.8FIPHUBCE, 5.8FIPHUCCE, 5.8FIPHUECE, 5.8FIPHURCE, 5.8FIPHUSCE, 5.8FSIPHUBCE, 5.8FSIPHUCCE, 5.8FSIPHUECE, 5.8FSIPHURCE, 5.8FSIPHUSCE

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
1	3853245	1	Adapter, Thermostat hsg		
2	3853651	8	Screw, High rise elbow to exhaust manifold		
3	3852111	1	Gasket, Thermostat hsg to engine		
4	3852071	1	O-ring, Thermostat		
5	3852216	1	Thermostat, Engine		
6	3853471	2	Screw, Adapter to intake manifold, therm hsg		
7	3850360	1	Housing, Thermostat hsg		
8	3852196	1	Clamp, Hose to reservoir, antisiphon valve		
9	3853155	6	Screw, Exhaust manifold		
10	3853391	1	Screw, Lift bracket & thermostat hsg		To intake manifold
11	3853401	1	Screw, Thermostat hsg to adapter, short		
12	3852098	2	Hose clamp, Therm hsg to water pump		
13	3852300	1	Hose, Thermostat hsg to water pump		
14	3853404	12	Nut, Exhaust manifold to engine		
15	3853633	1	Hose, Thermostat hsg to exhaust manifold		Port
16	3853420	1	Hose, Thermostat hsg to exhaust manifold		Stbd
17	3853780	2	Hose clamp, To thermostat hsg		
18	3852602	2	Hose clamp, Cap to exhaust manifold		
19	3852602	1	Hose clamp, To thermostat hsg inlet		
20	3853581	1	Hose, Oil cooler to thermostat hsg		
21	3852456	1	Gasket, Therm adapter to intake manifold		
22	3852476	2	Cardboard tube, Exhaust manifold		
23	3852602	2	Hose clamp, To exhaust manifold		
24	3852604	8	Hose clamp, Hose, exhaust pipe upper to lower		
25	3852604	8	Hose clamp, Hose, exhaust pipe upper to lower		
26	3853434	10	Stud, Exhaust manifold to cylinder head		
27	3855472	4	Screw, Pipe to gimbal		
28	3855281	1	Exhaust pipe kit		
	3851000	1	Exhaust pipe		
29	3850496	2	Gasket, Elbow to exhaust manifold		
			· Bulletin P-25-1-1	P-25-1-1-EN	Riser Gasket Replaced
30	3850422	1	Hose clamp, Water pump inlet		
31	3850361	1	Hose, Transom to water pump		290 DP
	3852331	1	Hose, Gimbal hsg to water pump		SX, DP-S
32		2	Pin, Exhaust seal assy to exhaust pipe		
33		4	Bushing, Exhaust seal assy to exhaust pipe		
34	3852649	1	Bracket, Center lift		
35	3855269	1	Exhaust pipe, starboard		
	3855271	1	Exhaust pipe, port		
	3850740	2	· Plug, Exhaust elbow		
36		2	Seal, Exhaust pipe		
			· Bulletin P-25-1-2	P-25-1-2-EN	Exhaust Seal Obsolete
37	3853390	4	Screw, Water pump pulley to hub		
38	3853615	2	Exhaust pipe, Exhaust pipe assy to exhaust elbow		5.8L
	3853609	2	Exhaust pipe		5.0L, SX
	3854500	2	Exhaust pipe, Upper high rise elbow to Y-pipe		5.0L, 290 DP
39	3854187	1	Pulley, Water pump		
40	3853608	2	Hose, Exhaust elbow to exhaust pipe, upper		
41	3852741	2	Hose, Upper exhaust pipe to exhaust pipe		
42	3853796	1	Pump		
43		1	· Gasket, Water pump plate		
44	3852824	1	Gasket, Water pump		
45	3852347	2	Exhaust manifold, Exhaust		Port & stbd
46	3853598	1	Elbow, Hose to reservoir		
47	3853787	1	Temperature sensor, Water temperature		
48	3852312	1	Bracket, Water pump		
49	3852348	1	V-belt, Water pump		
50	3850633	1	Hose, Antisiphon valve to therm hsg		
51	3852088	1	Clamp, Hose, therm hsg to reservoir		
52	3850654	1	Hose, Reservoir to antisiphon valve		
53	3850666	1	Nipple, Hoses, thermostat hsg to reservoir		

5.0FIPHUBCE, 5.0FIPHUCCE, 5.0FIPHUECE, 5.0FIPHURCE, 5.0FIPHUSCE, 5.8FIIHUBCE, 5.8FIIHUECE, 5.8FIPHUBCE,
5.8FIPHUCCE, 5.8FIPHUECE, 5.8FIPHURCE, 5.8FIPHUSCE, 5.8FSIPHUBCE, 5.8FSIPHUCCE, 5.8FSIPHUECE, 5.8FSIPHURCE,
5.8FSIPHUSCE

REF	PART NO.	QTY	DESCRIPTION	SEE SEC.	NOTES
54	3854925	1	Clamp, Hose, antisiphon valve from reservoir		
55	3853326	2	Screw, Water pump bracket to engine		
56	3853397	2	Screw, Water pump to bracket		
57	3853713	1	V-belt, Alternator pulley		
58	3852332	1	Hose, Water pump to reservoir		
59	3852602	1	Hose clamp, Gimbal housing		
60	3851623	1	Sea water pump		
61	3853742	2	Gasket, Manifold to engine		
62	3852054	2	Washer, Screw, water pump to bracket		